




# digiMIX24 Dante-32 or USB-32 Module Installation



Thank you for your purchase of this Dante-32 or USB-32 multi-track audio module. This module can only be installed in a digiMIX24 mixer. For complete configuration and operating details, please refer to the digiMIX24 manual, or visit the Ashly website to review Dante-32 or USB-32 application notes.

## To install the module, reference the illustration below and follow these steps:

- 1) Remove the mixer from power by unplugging the AC cord from the mixer. To avoid static shock damage to components, ground both yourself and the work surface before beginning the installation.
- 2) Remove the two screws holding the blank plate to the back panel option slot as shown.
- 3) Carefully seat the Dante-32 or USB-32 module into the two metal card-edge guides on either side of the mixer's module slot as shown.
- 4) After the module is properly placed within the card-edge guides, press the module into the internal card-edge connector. The module panel should fit flush with the mixer back panel.
- 5) Re-fasten with the two screws removed during step #2.
- 6) Re-connect the power cord. The mixer is now ready to be powered up and connected to Dante or USB audio.

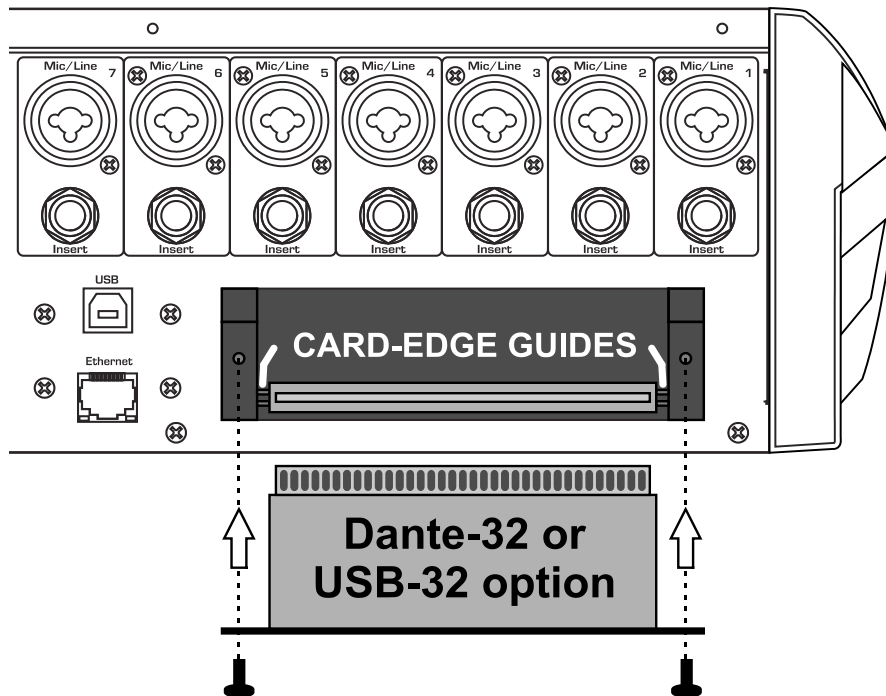

ASHLY AUDIO INC. 847 Holt Road Webster, NY 14580-9103, USA

Phone: (585) 872-0010 Fax: (585) 872-0739 Toll Free (800) 828-6308 [www.ashly.com](http://www.ashly.com)

© 2016 by Ashly Audio Corporation. All rights reserved worldwide. Ashly Audio is a division of Jam Industries, Ltd. All features, specifications, and graphical representations are subject to change or improvement without notice.