



Ashly WR-5 Remote Control

1. Introduction


The WR-5 is a microprocessor based serial data remote control unit for Ashly NE or NX products. Compatible products currently include Pema amplifiers, ne8800 and ne4800 system processors, the ne24.24M matrix processor, all models of the NE multichannel power amplifiers, and nXe/nXp amplifiers. Using Protea^{nc} software, six function select buttons and two parameter adjust buttons are available to control a limited range of assigned functions within their host product. Up to four WR-5 units can be daisy-chained and phantom powered from one host, and even more can be added using an in-line power supply adapter such as the Ashly RPS-18. *Note: When an WR-5 is connected to an Ashly product, no other serial communications devices, including the Ashly RD-8C remote fader controller, may be used with that product.*

The WR-5 is designed to fit into a standard US electrical wall box. Electrical connections to the host unit are made using a four conductor low gauge wire terminated with Euroblock connectors. There is also a two pin jumper labeled “J6” which requires the provided female jumper to be installed in specific situations (see section 2). *Note: The WR-5E is the electrical equivalent to the WR-5, but designed to fit into a UK electrical box.* A standard decora plate (not included) can be purchased separately to cover the WR-5 electrical box and satisfy the aesthetic needs of the installation.


Note: Avoid static shock disruptions by mounting the WR-5 to an earth-grounded metal wall box, or by earth-grounding the metal cover plate. This prevents potential static discharge from flowing back through the data wires to the host device.

Each of six buttons on the WR-5 can be programmed through Protea^{nc} Software to engage one of the following functions (if available): preset recall, preset scroll, gain control, channel engage/mute, zone source selection, logic output active high, logic output active low, and matrix mixer, with a green LED next to each button to display active status.


To the right of the five programmable buttons is a pocket in the mylar overlay for a paper function label to be inserted. See section 6 for a blank template which can be copied, or get an editable label template from the Ashly website. The two other buttons are used to adjust function parameters, indicated by the LED character display.

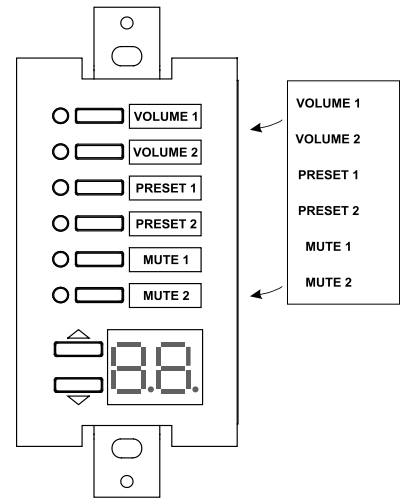

WR-5 Front View with Label

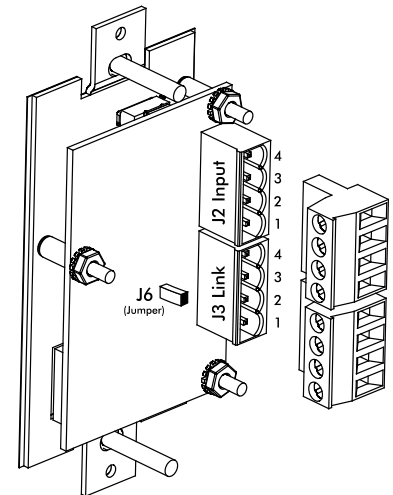

WR-5 Rear View

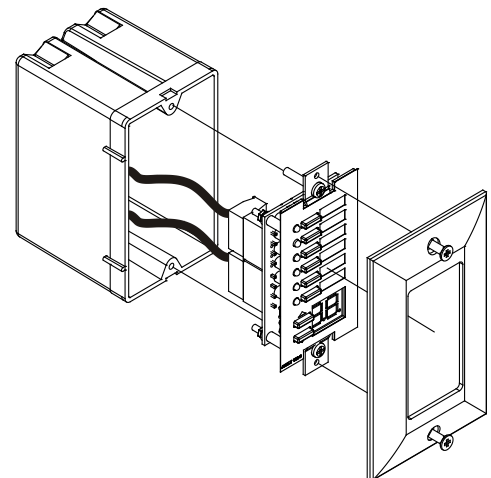

WR-5 Wall-Box Assembly

Ashly Audio

847 Holt Road Webster, NY 14580-9103 Phone: (585) 872-0010
Toll-Free: (800) 828-6308 Fax: (585) 872-0739 ashly.com

2. Wiring a WR-5


The WR-5 uses a four conductor phantom powered serial bus to connect to its host unit or to an additional WR-5. Up to four WR-5 remotes can be powered from one host unit. Ashly offers the RPS-18, an inline power booster for use in applications that require more than four WR-5 units. Four conductor telephone wire is suitable for all wiring, as well as CAT5, but if shielded wiring is used be sure to ground the source end of the shield. *Under no circumstances should shielding be left unconnected to ground, as the added line capacitance will degrade the data signal.*

Wiring in series: If more than one WR-5 is being wired in series, connect the next length of four conductor bus wire from the first WR-5's "LINK" connector to the following WR-5 "INPUT" connector, and so on, until the last WR-5 is wired. On the last WR-5 in series wiring, *and even if there is only one WR-5*, install the female jumper J6 on the back of the pcb to terminate the serial data bus, and *make sure all prior WR-5 units have the J6 jumper removed*. Maximum cable length is 1,000 ft between the host unit and the first WR-5, and 1,000 ft between each subsequent WR-5.


Wiring in parallel from a central location:

Some installations are more suited to wiring multiple WR-5 units from one central location rather than daisy-chaining one WR-5 to the next. Using a punch down or screw terminal block wired to the host unit's data connector, each WR-5 uses one four conductor cable terminated with a single euroblock connector originating from the punch down block. The +18 and ground connections get parallel wired to each WR-5 (up to four), but the data signal still gets wired *in series* In the following manner: Wire the host unit's Data Out (pin 2) to the punch down block, then out from there to the

Wiring Multiple WR-5 Remotes In Series:

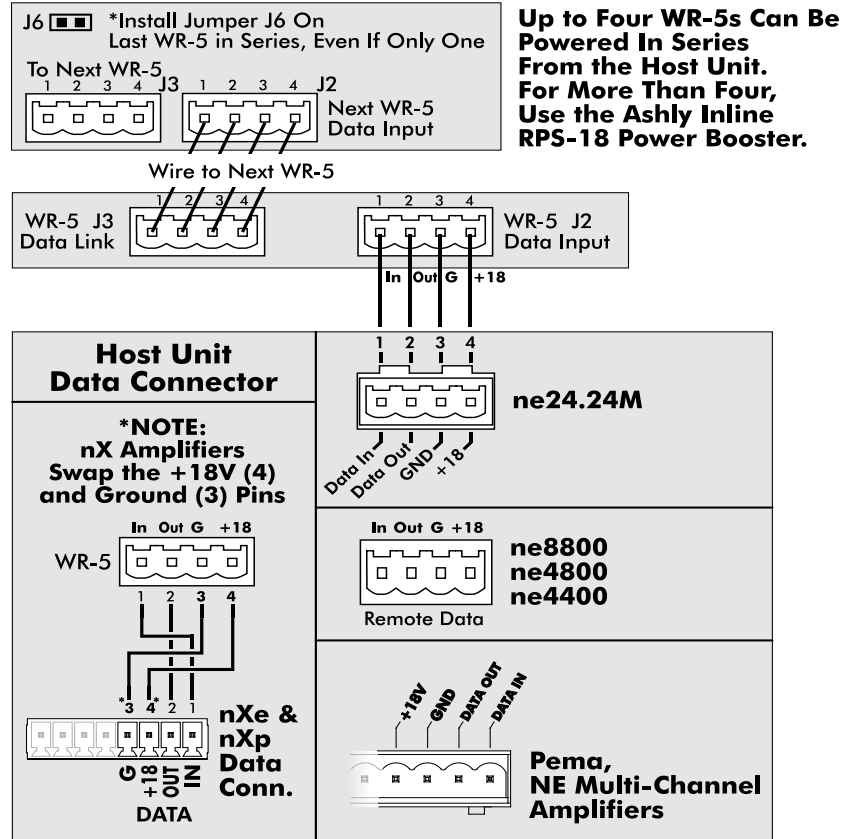

Wiring Multiple WR-5 Remotes From a Central Location Using Punch Down/Terminal Block:

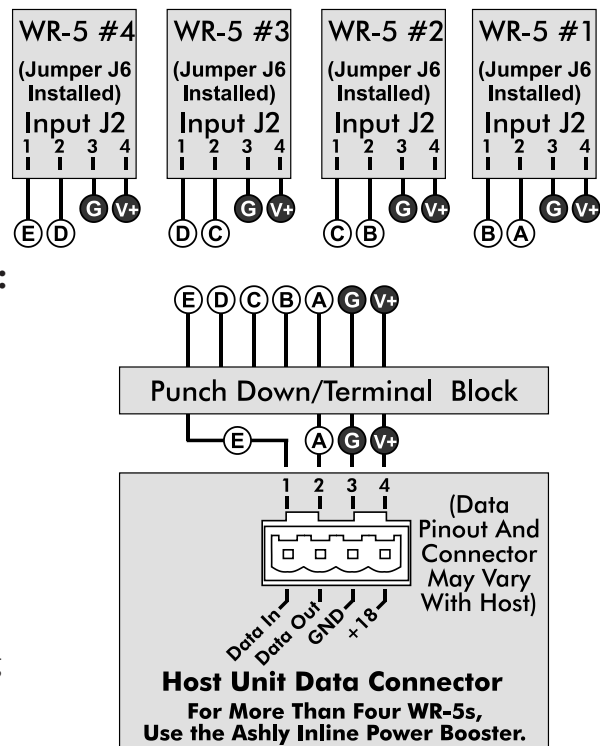

first WR-5 Data Input (J2 pin 2), out J2 pin 1 back to an isolated punch down block connection, then back out from there to the next WR-5 data input (J2 pin 2), out J2 pin 1 of that WR-5 back to yet another isolated punch down block connection, and so on, with the last WR-5 Data Output (J2 pin 1) wired back to the host unit's Data In connection. *In this type of centralized wiring scheme, every WR-5 that returns its data signal back to the punch down block using J2 pin 1 must have its J6 jumper installed.* Without the J6 jumper installed, the data input signal on J2 pin 2 is routed to J3 pin 2 for WR-5 series wiring as illustrated above. Maximum cable length is 1,000 combined feet between any two active units.

When more than four WR-5s are being used, an external DC power supply is required. The power supply must provide at least 13VDC and no more than 35VDC. In addition, each WR-5 requires 30mA of current. To determine the minimum current rating of the power supply in mA, multiply 30 times the number of WR-5 remotes to be used.

Ashly offers an inline power booster called the RPS-18 that provides 24VDC and 625mA maximum current. It has common, euroblock-style terminals for easy insertion between the host data port and WR-5 input jack. Alternatively, it can be inserted between the J3-LINK jack of any of the first four WR-5 remotes, and the J2-INPUT jack of the next WR-5 in the chain. This latter application can be useful to overcome voltage losses caused by long cable runs to multiple remotes. In either application, *do not connect the +18V pin from the host unit's data connector to the external supply +18V.* It is possible to use the host unit's +18V for the first four WR-5 remotes and then supplement any remaining WR-5 remotes with the inline power booster. *Always connect the external power supply ground to the host unit's data connector ground.*

Cable length - Two things to consider when running cable to the WR-5 are data integrity & power supply voltage. Active buffers (line drivers) in the WR-5 maintain data integrity, allowing up to 1,000ft (304m) of cable between devices. Thus, a maximum cable length up to 1,000ft may be used between the remote data port and WR-5 remote, and another cable up to 1,000ft may be used from the WR-5 Link jack to an additional WR-5 remote, and so on. Hence each WR-5 functions as a data repeater.

However, long cable runs act as resistors, which reduce the DC power supply voltage delivered to the WR-5. Each WR-5 requires a minimum of 13VDC measured across J2-INPUT jack terminals 3 & 4. It is vital to keep track of the power supply voltage drop across each successive cable run to those pins. For example, typical CAT5 (24AWG) wire has a DC resistance of 0.026 ohms per foot. Since there are two conductors, (V+ and GND), the resistance is doubled to 0.052 ohms per foot. Therefore, voltage drop across CAT5 wire can be computed as:

$$\text{Voltage drop} = \text{current (in Amps)} * 0.052 \text{ (ohms)} * \text{cable length in feet}$$

Where current is computed at 30mA (0.03A) per WR-5. If the supply voltage at the WR-5 falls below 13VDC, the WR-5 will not power up. *TIP: To minimize voltage loss over cable length, use multiple conductors for V+ and GND, (WR-5 terminals 3 & 4). For example, CAT5 wire has a total of eight 24AWG conductors. Use one pair for wiring up the two data terminals. Use three conductors in parallel for V+, and use the three remaining conductors for GND. This effectively reduces the power supply voltage drop by a factor of three.*

3. Getting Started

The WR-5 comes with all function buttons set to “Off”. To program from a PC running Protea^{ne} software, follow these steps:

- 1) Connect a PC running Protea software to the host product using a standard ethernet RJ-45 cable.
- 2) Connect the first WR-5 to the NE product’s data connector as shown, installing the jumper on J6 if it is the only WR-5.

Upon connecting and powering up the system, the WR-5 will have a “heartbeat”, meaning an internal small green LED on the PCB will be flashing. As a WR-5 powers up, the LCD first shows the two digit firmware revision, then once communication with the host is established the WR-5 displays “- -” in the LCD window. If there is a two-digit number showing in the LCD, that means the WR-5 has been previously programmed to control a zone and that number is the gain level for that zone.

In the software window, the WR-5 will appear in an expanded menu of its host unit in the left side listing on the screen. Individual products and their remote control units can be dragged onto the project canvas to simulate physical rack and room installation groups, but editing each product can be done from either the product list or the canvas. Once an image has been placed on the canvas, it must be deleted by hand if that device is no longer available to the software. Scanning for devices does not automatically remove images which may have been installed at one time but are now off line. In the network device tree at the left side of the screen, an offline host unit will appear in red text while an online unit appears in green. *Further WR-5 help is available by opening the WR-5 device and pressing F1, or by navigating through the software help menu.*

The project canvas is used to visually represent and control a fixed physical sound system installation, and can display all Ashly processors, amplifiers, and remotes used in that system. Lines, rectangles, text, and image files can be added to create a custom virtual control screen along with the other products and individual control objects. To see all available canvas tools, right click anywhere over open canvas. Checking <Design Mode> allows placed objects to be moved around, while unchecking <Design Mode> locks objects in place.

4. Programming the WR-5

Protea software is able to determine from the host product which functions are available for WR-5 control. Not all functions listed below are available on all products.

- 1) **Off** - No function assigned and the button’s LED remains unlit
- 2) **Preset Recall** - A single preset number is assigned to a button. When the button is pressed, the recalled preset number and the letters “PC” are alternately flashed on the WR-5 for seven seconds, locking out any other WR-5 action for that time.
- 3) **Preset Scroll Mode** - A range of presets can be assigned to a button and selected by pressing and holding the up/down buttons. Upon release of the up/down button, the displayed preset will load. The button’s LED will flash for the duration of the preset scroll operation.
- 4) **Gain Control** - Ashly products with pluggable DSP functions must have an (ne)WR5 remote gain block placed in software on the channel(s) whose gain is to be under WR-5 control.

Since there are several possible gain adjustment points within the host product, the WR-5 displayed gain level is only a relative adjustment for that WR-5. In other words, gain could be changed elsewhere in the host unit, independent from WR-5 control. The WR-5 can adjust gain from a relative 0 to 99, and an upper and lower number limit can be set in the function range section to limit the maximum and minimum reach of that control.

When a gain control button is pressed, its LED flashes and the up/down buttons determine gain. If the up/down buttons remain idle for five seconds, the gain button becomes inactive until being pressed again.

If a zone output is active for that WR-5, meaning one or more output checkboxes are selected in software within the <Zone Setup> area, the WR-5 up/down buttons and numeric display will revert from the individual button gain mode to the overall output gain adjust mode for that zone after five seconds of inactivity. If no output is selected for that zone, the display shows "--" as the default.

5) **Channel Engage/Mute** - A button can be configured to engage or mute a channel or group of channels. The button LED is on when the channel(s) are engaged on.

6) **Zone Source Selection** - This is used to select one or more inputs for the zone under WR-5 control. When multiple zone source select buttons are assigned uniquely different or overlapping inputs, each button will simply add to or subtract from the other's input selections, unless the <Exclusive Source Selection> box is checked in the zone setup, in which case *only* the current button's selected inputs will be used.


The <Disable Zone Level Control> checkbox allows input source selections to be changed from the WR-5, but not the output gain. The output gain can still be adjusted from software, but the WR-5 user is locked out from making zone output gain changes.

7) **Logic Output Active High** - This allows the user to toggle the logic output assigned pin to the button. The LED is on when the output is high.


8) **Logic Output Active Low** - The LED is on when the output is low.

9) **Matrix Mixer** - This is used to select one or more inputs for the zone under WR-5 control, and allows level control of that group at the DSP matrix mixer point.

5. WR-5 Dimensions

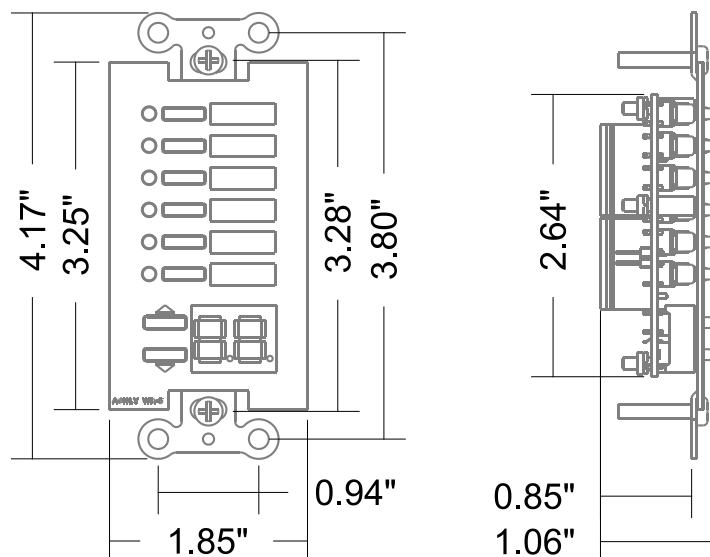

6. WR-5 Button Label



7. Troubleshooting

For a complete step by step procedure for troubleshooting an installed WR-5, please refer to the Ashly website and search for <WR5 Troubleshooting>.

FCC Compliance

This device complies with part 15 of the FCC Rules for class A operation, and is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY (USA ONLY)

For Customers outside of the United States, please contact the distributor or dealer from whom the unit was originally purchased.

For units purchased in the USA, warranty service for this unit shall be provided by ASHLY AUDIO, INC. in accordance with the following warranty statement.

ASHLY AUDIO, INC. warrants to the owner of this product that it will be free from defects in workmanship and materials for a period of FIVE years from the original date of purchase, with the exception of certain touch-screen displays and motorized faders for which the warranty extends THREE years from the original date of purchase, and ONE year from the original date of purchase for Ashly EXP products.

Ashly Audio Inc. will, at its discretion and at no charge, either repair or replace any defective product or component upon prepaid delivery of the item to Ashly Audio Inc. service department. All warranty claims and returns of product must be accompanied by proof of the original date of purchase in the form of a valid sales receipt. This warranty confers specific legal rights, and additional rights pertaining to repair or replacement may vary by state.

WARRANTY EXCLUSIONS:

- 1) This warranty does not apply to damage resulting from misuse, neglect, improper installation, unauthorized modifications, or operation outside the product's intended use (failure to follow instructions in the operator's manual)
- 2) The warranty excludes defects or damages caused by external factors, including but not limited to accidents, environmental conditions, power surges or improper handling.
- 3) This warranty does not cover normal wear and tear, cosmetic damage, or consumable components that are expected to degrade over time.
- 4) The warranty does not extend to products that have been altered, repaired, or serviced by any party not authorized by the manufacturer.
- 5) Any damage arising from the use of incompatible accessories, attachments, or electrical supplies is excluded from coverage.
- 6) This warranty does not apply to equipment that has been subjected to installation related damage, improper storage, or transportation related impacts incurred during consumer-initiated transport after the product has been originally received.

This warranty is void if the serial number is altered, defaced, or removed. ASHLY AUDIO, INC. reserves the right to make changes in design, or make additions to, or improvements upon, this product without any obligation to install the same components as those installed on previously manufactured products.

Ashly Audio reserves the right to assess a fee for shipping and handling, should a product be determined non-defective upon completion of testing and thorough evaluation, regardless of warranty status.

Handling and storage fees will accrue on any product for which payment is not remitted within the required timeframe, in accordance with applicable state regulations.

In accordance with applicable state laws, any product deemed abandoned, left unclaimed, uncollected, or without customer response beyond the specified holding period may be used, sold or disposed of at the discretion of Ashly Audio Inc.

To the extent permitted by applicable state law any implied warranties, including the implied warranty of merchantability and the implied warranty of fitness for a particular purpose, are limited to the term of this written warranty. Some states do not allow limitations on the duration of implied warranties, so these limitations may not apply to you. Nothing in this warranty is intended to limit or exclude any rights or remedies available to the consumer under applicable state or federal warranty laws.

OBTAINING WARRANTY SERVICE INSIDE THE USA:

For warranty service in the United States, please visit the Ashly website, or [click here](#).

OBTAINING WARRANTY SERVICE OUTSIDE THE USA:

Please contact the authorized Ashly Distributor in your country. [Click here for a list of International Distributors](#).

ASHLY AUDIO 847 Holt Road Webster, NY 14580-9103, USA
Phone: (800) 828-6308 (585) 872-0010 Fax: (585) 872-0739 www.ashly.com

An *exertis* |  business

©2017 Ashly Audio. All rights reserved worldwide.

All features, specifications, and graphical representations are subject to change or improvement without notice.
All trademarks represented herein are the property of their respective owners.

