




ne24.24M

24 Bit Digital Multiple Channel Matrix Processor

Operating Manual

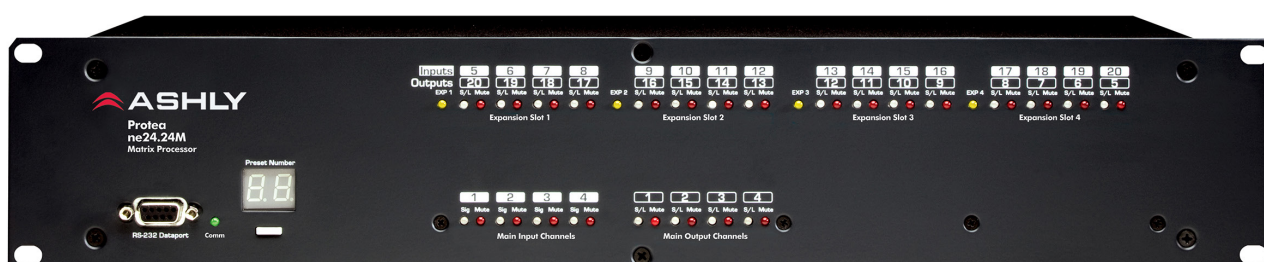

ASHLY AUDIO

847 Holt Road Webster, NY 14580-9103 Phone: (585) 872-0010

Toll-Free: (800) 828-6308 Fax: (585) 872-0739

ashly.com

Important Safety Instructions Consignes de sécurité à lire attentivement



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device



Le symbole de la flèche dans un triangle équilatéral symbolisant la foudre est prévu pour sensibiliser l'utilisateur à la présence de tension de voltage non isolée à l'intérieur de l'appareil. Elle pourrait constituer un danger de risque de décharge électrique pour les utilisateurs. Le point d'exclamation dans le triangle équilatéral alerte l'utilisateur de la présence de consignes qu'il doit d'abord consulter avant d'utiliser l'appareil.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
6. Do not use this apparatus near water.
7. Clean only with dry cloth.
8. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

1. Lisez ces instructions.
2. Conservez ces instructions.
3. Observez les avertissements.
4. Suivez ces instructions.
5. Pour réduire le risque de feu ou la décharge électrique, ne pas exposer cet appareil pour pleuvoir ou l'humidité.
6. Ne pas utiliser l'appareil près de l'eau.
7. Le nettoyer à l'aide d'un tissu sec.
8. Ne pas bloquer les ouvertures de ventilation, installer selon les consignes du fabricant.
9. Eloigner des sources de chaleur tel: radiateurs, fourneaux ou autres appareils qui produisent de la chaleur.
10. Ne pas modifier ou amputer le système de la mise à terre. Une prise avec mise à terre comprend deux lames dont une plus large ainsi qu'une mise à terre: ne pas la couper ou la modifier. Si la prise murale n'accepte pas la fiche, consulter un électricien pour qu'il remplace la prise défectueuse.
11. Protéger le cordon de secteur contre tous bris ou pincement qui pourraient l'endommager, soit à la fiche murale ou à l'appareil.
12. N'employer que les accessoires recommandés par le fabricant.
13. N'utiliser qu'avec les systèmes de fixation, chariots, trépied ou autres, approuvés par le fabricant ou vendus avec l'appareil.
14. Débrancher l'appareil lors des orages électriques ou si inutilisé pendant une longue période de temps.
15. Un entretien effectué par un centre de service accrédité est exigé si l'appareil a été endommagé de quelque façon: si il a été exposé à la pluie, l'humidité ou s'il ne fonctionne pas normalement ou qu'il a été échappé.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in both a commercial and residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Table Of Contents

1 INTRODUCTION	4
2 UNPACKING	4
3 AC POWER REQUIREMENTS	4
4 FRONT PANEL FEATURES	5
4.1 RS-232 Dataport	5
4.2 Com LED	5
4.3 Preset Number	5
4.4 Main Input Channel LEDs	5
4.5 Main Output Channel LEDs	5
4.6 Expansion Module LEDs	5
5 REAR PANEL FEATURES	6
5.1 Input Connections	6
5.2 Output Connections	6
5.3 Expansion Modules	6
5.4 Logic Inputs/Preset Recall	6
5.5 Ethernet Control Jack	7
5.6 0-5V Remote Level Control	7
5.7 RS-232 Dataport	7
5.8 Data In/Data Out Connection	7
5.9 Factory Reset Switch	8
5.10 AC Inlet and Power Switch	8
6 EXPANSION MODULE INSTALLATION	8
7 PROTEA^{ne} SOFTWARE	9
8 AUDIO FUNCTIONS	10
8.1 Input Audio Functions	10
8.2 Output Audio Functions	14
9 OTHER SOFTWARE FUNCTIONS	17
9.1 Device Options	17
9.2 Preset Options	17
9.3 Copying Settings To Another Input Or Output	17
9.4 Security	17
9.5 Metering	18
10 REMOTE CONTROL	18
10.1 WR-1 Volume Control	18
10.2 WR-1.5 Volume Control and Preset Recall	19
10.3 WR-2 Contact Closure Preset Recall	19
10.4 WR-5 Programmable Zone Controller	20
10.5 neWR-5 Networked Programmable Zone Controller	21
10.6 RD-8C Remote Level Attenuator	21
10.7 FR-8 and FR-16 Networked Programmable Fader Controllers	22
10.8 Ashly Remote Application for iPad®	22
11 GPO LOGIC OUTPUT	22
12 TROUBLESHOOTING TIPS	23
13 SPECIFICATIONS	24
14 TYPICAL APPLICATIONS	25
15 LIMITED WARRANTY	27

1. INTRODUCTION

Thank you for your purchase of the ne24.24M. The ne24.24M matrix processor uses modular expansion cards to provide up to twenty-four channels of audio matrixing and processing, along with provisions for remote control and logic output. The base unit offers a four-input/four-output configuration. Each input and output expansion card has individual DSP processing allowing expansion of the base unit's total inputs or outputs four channels at a time. In addition, an eight channel general purpose logic control output expansion card is available for controlling lighting or AV equipment via software, or by recalling presets.

Expansion cards - Inputs, outputs, or a logic output card are easily installed in the field without the need to reset switches or reprogram the device.

Input channel processing blocks include: Mic preamp with up to 60dB gain, 48V phantom power and "push to talk" switching, input level with polarity, passive potentiometer or active RD-8C remote level control, time delay, fifteen band fully parametric EQ, noise gate, autoleveler, and ducker.

Output channel processing blocks consist of a cross point mixer, HPF/LPF, delay, fifteen EQ filters, gain, remote level control, and limiter. The cross point mixer in the output section allows you to route any input to any output at any level and mute any input at any output without affecting the input configuration. The HPF/LPF crossover section offers Bessel, Butterworth and Linkwitz-Riley filters with 12, 18, 24 and 48dB octave slopes.

Matrixing allows you to route any input to any output and control individual levels once they have been assigned. Fixed path architecture and extensive processing power per channel reduces the amount of time it takes to set up the system.

Programming requires Ashly Protea Software on a Windows PC using a standard 10/100BASE-T Ethernet connection. *Note: Protea Software will not work over RS-232, that is used for non-Ethernet systems only.*

Connectors are euroblock for all audio inputs and outputs, eight logic inputs for preset recall, eight channels of remote DC level control, and a data connection for Ashly's WR-5 active remote. Ethernet uses an RJ45 connector, while RS-232 uses a D-Sub 9 female.

2. UNPACKING

After unpacking, please inspect for any physical damage. Save the shipping carton and all packing materials, as they were carefully designed to reduce to minimum the possibility of transportation damage should the unit again require packing and shipping. In the event that damage has occurred, immediately notify your dealer so that a written claim to cover the damages can be initiated. The right to any claim against a public carrier can be forfeited if the carrier is not notified promptly and if the shipping carton and packing materials are not available for inspection by the carrier. Save all packing materials until the claim has been settled.

3. AC POWER REQUIREMENTS

Note: The AC power switch for model ne24.24M is on the back panel. The ne24.24M uses a universal input power supply which will accept any line voltage from 90VAC to 240VAC, 50-60Hz. A standard IEC-320 grounded AC inlet is provided on the rear panel to accept the detachable power cord. **Never remove the AC earth ground connection to the ne24.24M.** In the event of fuse failure, refer the product to a qualified service technician for fuse replacement, replacing only with the same type and rating fuse.

**WARNING: THIS APPARATUS MUST BE EARTH GROUNDED
THROUGH THE SUPPLIED POWER LINE CORD**


4. FRONT PANEL FEATURES

4.1 RS-232 Dataport

The ne24.24M has two RS-232 dataports wired in parallel, one on the front panel and one on the back, for connecting to non-ethernet control hardware. Protea software does not work over RS-232.

4.2 Com LED

This green LED lights for a few seconds whenever there is communication activity to the unit from a host PC. It is also used to respond to an "identify device" command from software.

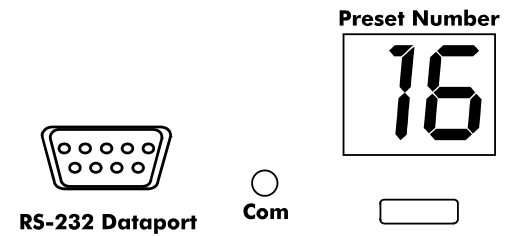


4.3 Preset Number

This displays the currently loaded device preset number (1-31). The switch can be disabled from software. To select a new preset, press and hold the switch until the desired preset number is displayed. When the preset button is released, the new preset is loaded. This display is also used to indicate firmware revision during start-up, and status during factory reset.


4.4 Main Input Channel LEDs

The ne24.24M base unit has four fixed input channels. Each input channel's two color Sig LED indicates input signal level of -20dB (green), or +20dB clip (red) respectively. The Sig LEDs detect signal levels *after* any gain adjustments are made within the ne24.24M preamp section. The red input mute LED becomes lit when an input channel is muted through software or remote control.

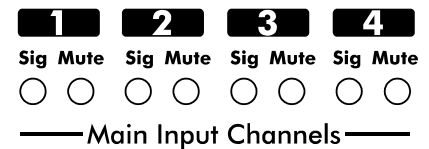


4.5 Main Output Channel LEDs


The four fixed output channels on the ne24.24M have three color LEDs to indicate signal, limiter threshold, and clip. The green signal LED indicates -20dB output level. The amber limiter threshold LED depends on settings established within software, and, assuming the limiter is active, indicates that sufficient signal level has been reached for the limiter to begin the process of gain reduction. Clipping occurs at +20dB and is indicated by a red LED. The red output mute LED becomes lit when an output channel is muted through software or remote control.

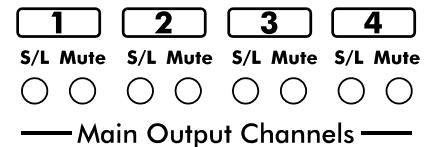

4.6 Expansion Module LEDs

The ne24.24M is expandable by adding up to 16 additional inputs or outputs. Expansion modules of four inputs or four outputs each can be field installed by a qualified service technician. If an expansion card slot has been filled, its respective amber LED (EXP 1, EXP 2, etc.) is automatically lit. The LED indicators on unused expansion slots do not light.




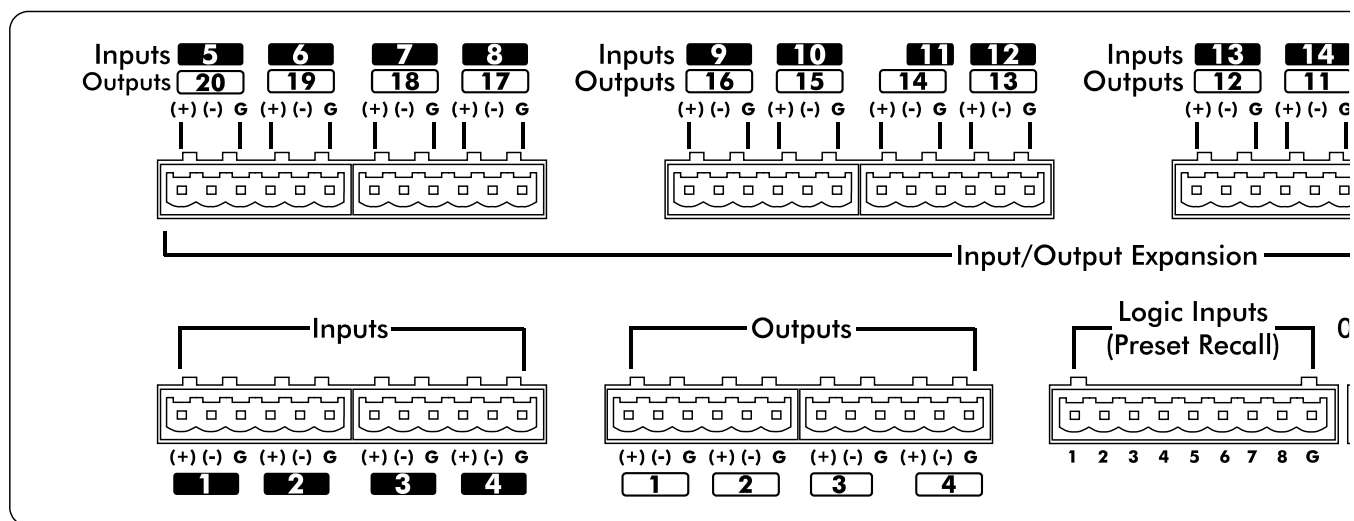

5. REAR PANEL FEATURES

5.1 Input Connections

Balanced input signals are connected to the ne24.24M using the included Euroblock connector. A flat blade screwdriver is required to connect a stripped wire lead to the external connector piece, which is then inserted into the rear panel Euroblock receptacle. It is important that both (+) and (-) inputs are properly terminated or signal loss and noise may result. In other words, if an unbalanced input signal is used, connect the signal to the (+) input, and connect the ground wire to both the (-) and ground connection.

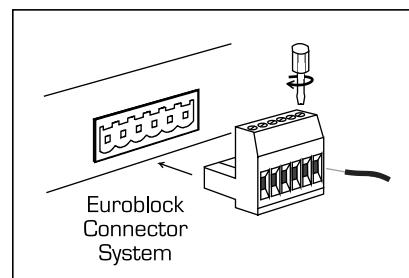

5.2 Output Connections

Like the inputs, output connections are made using the included Euroblock connector.


All outputs are servo balanced, and may be wired balanced or unbalanced. For unbalanced output connections, use (+) and ground and tie (-) to ground.

5.3 Expansion Modules

The ne24.24M base model is expandable by up to 16 additional inputs or outputs, as well as a single module card used for eight general purpose logic outputs (GPO). Expansion modules of four inputs or four outputs each can be installed in any expansion slot. *Input expansion modules use green Euroblock connectors, output modules use black connectors.* Removable metal plates cover unused expansion slots on the back panel. The optional general purpose output logic (GPO) card is used to drive preset controlled relays or another device's logic control inputs. The GPO card comes with a function and wiring sticker which must be placed on the ne24.24M back panel above the Input/Output slot where the GPO option is installed. Only one GPO card can be installed in a ne24.24M.

5.4 Logic Inputs (Preset Recall)

There are no user controls on the ne24.24M, making it ideal for permanent installations where security is an issue. There may be times however, when real time variables require a change in system settings, such as EQ, gain, and delay settings changing when a room size changes. For these types of changes, the ne24.24M offers the ability to recall up to eight different presets, or switch other events such as a mic input "push to talk" using contact closures. Contact closures are nothing more than external, user installed switches that when closed, recall a previously defined preset or sub-preset that will apply changes to inputs and/or outputs. The switches can be anything from a rotary switch on a control room panel, to automatic door sensors scattered throughout a conference center, to a microphone key switch, etc. Contact closures allow for flexibility while maintaining a high degree of system security.

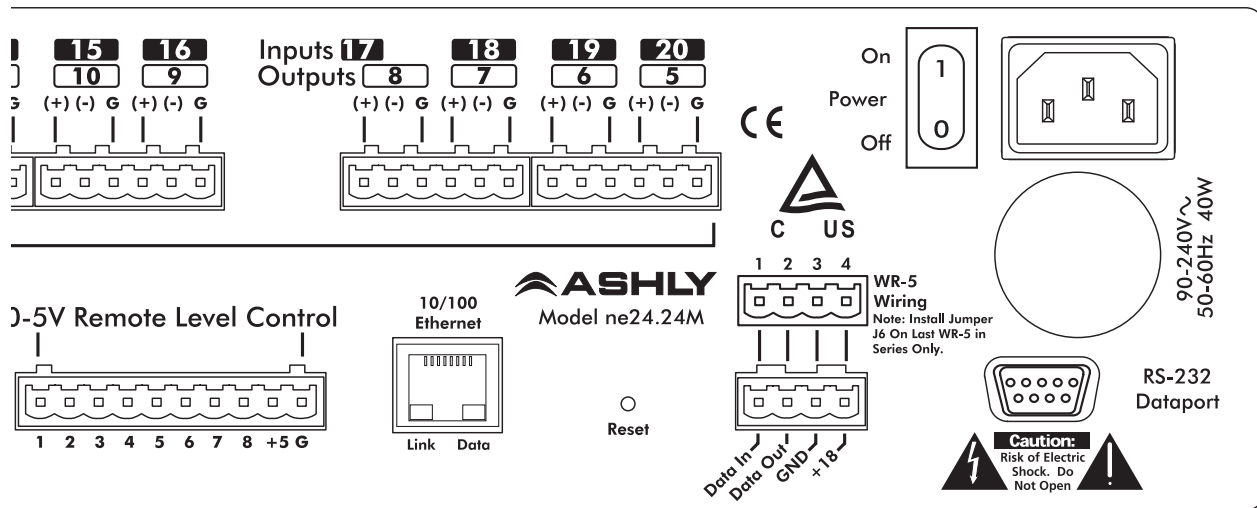

To use contact closure switching, up to eight presets (1-8) must first be defined according to the needs of the installation. To use the mic input “Push To Talk” feature, select the “Push To Talk Mic” checkbox in the Protea software’s mic preamp dialog box and assign it a logic input pin. The preset recall feature for that contact closure is then deactivated. Switches are to be configured so that closing the switch contact triggers the preset recall event. It doesn’t matter if the switch is momentary or latching, the only thing that triggers the event is the transition from open to closed for a given circuit. Closing a circuit will automatically override any previously recalled presets. Up to eight switches can be used, with all switches sharing a common ground connection. The number below the nine pin Euroblock contact closure connector equals the number of the preset which will be recalled when that switch is closed. Always use the ne24.24M contact closure ground for contact closure switches. *Do not connect the ne24.24M contact closure ground to any other external grounds.*

5.5 10/100 Ethernet Control Jack

Use this RJ-45 jack to connect directly to a computer or to a 10/100 Base-T ethernet network using Protea software for access to the comprehensive suite of device setup, audio controls, and monitoring functions.

5.6 0-5V Remote Level Control

Any of the inputs or outputs on the ne24.24M can have their levels remotely controlled through this simple DC control port. Use the provided +5VDC and Ground (pins 9 and 10), along with a potentiometer, switched resistor network, or relay (for muting), to return a DC voltage to the desired input or output control pin. Using Protea software, each remote level control pin can be assigned any combination of inputs or outputs to create up to eight remote control groups (see sec 11.1). The remote level control can only attenuate the signal, it can not provide gain, so properly set up the gain structure within the ne24.24M before using remote level control. +5V on any control pin has no attenuating effect, while 0V referenced to the connector ground fully attenuates the signal. *Do not connect the remote level control ground to any other external grounds.*

5.7 RS-232 Dataport

The ne24.24M has two RS-232 dataports, wired in parallel, with one on the front panel and one on the back, for connecting to a computer for AMX, Crestron, or other third party non-Ethernet controllers. Control data for the this jack uses the RS-232 protocol, and does not support the MIDI baud rate. Supported baud rates are 9600bps and 38,400bps. *Protea software will not work using RS-232, use Ethernet instead.*

5.8 Data In/Data Out Connection

The data in and out connectors are used for connecting the ne24.24M to the Ashly WR-5 programmable remote controller or the RD-8C level controller.


5.9 Factory Reset Switch

Factory reset is used to clear all user defined preset names and control values and reset them to their original factory settings. *Save your ne24.24M device presets to a PC first if you wish to use them again after factory reset.*

Factory reset to the ne24.24M is accomplished by pressing and holding a recessed switch on the back panel during power up. The switch is found in a small hole labelled “Reset”. There is a 10 second countdown in the front panel LED display to indicate a factory reset is about to occur. Releasing the switch or shutting off power at any time during the countdown will stop the factory reset from occurring. At the end of the countdown, the letters “Fr” flash in the display for about 20 seconds until factory reset is complete. In addition to resetting all presets to factory default, any password or security settings will be lost when a factory reset is performed.

5.10 AC Inlet and Power Switch

A detachable AC power cord is used on the ne24.24M. The internal universal power supply works from 90 to 240 VAC, 50-60Hz. Always use the AC mains power cord provided with the unit. The power switch is found on the back of the unit.

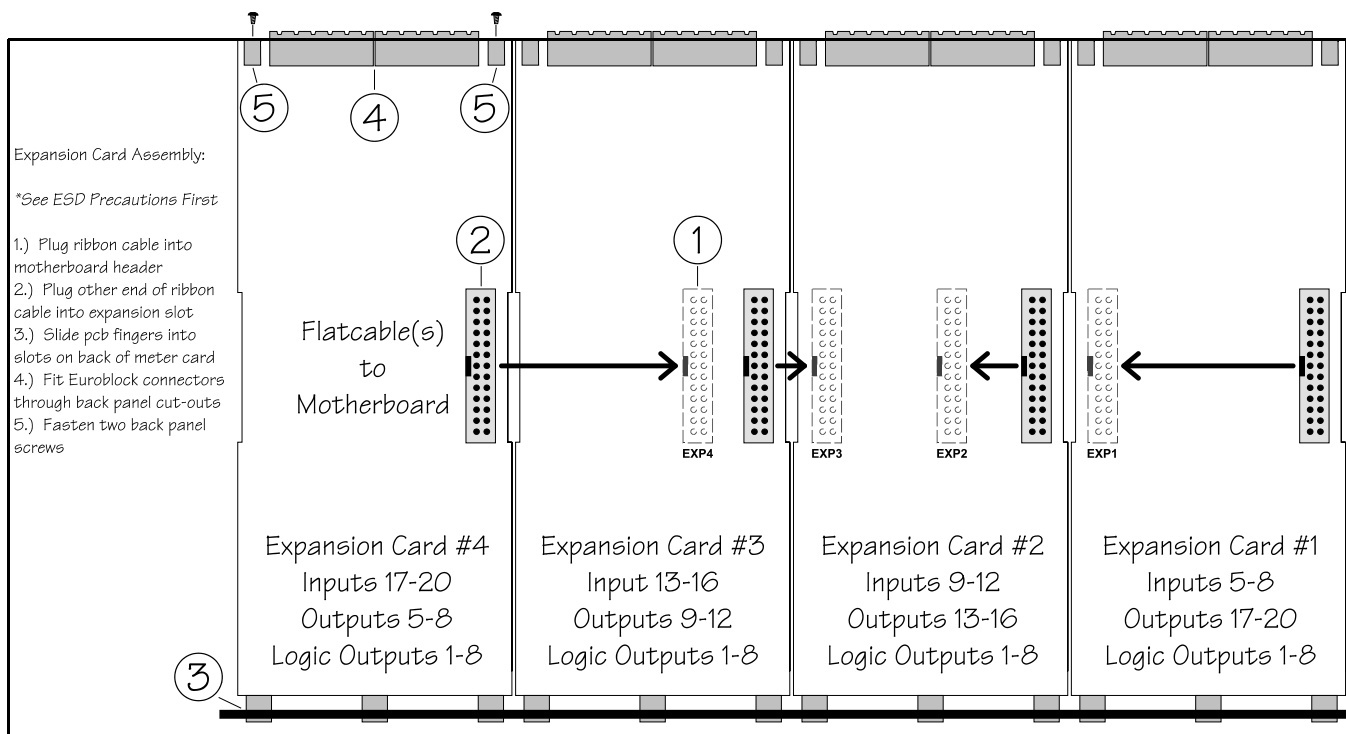

6. EXPANSION MODULE INSTALLATION

The ne24.24M can be ordered from the factory with expansion modules pre-installed to suit the application, or as a 4 x 4 base unit. Should the need arise to add input or output capacity at a later time, as well as logic output function, additional modules can be purchased and easily installed in the field. There are a total of four expansion slots available, and each slot accepts either an input, an output, or a logic output module (GPO). The ne24.24M autodetects if a slot has been filled, and whether it is an input, output, or logic output. The software interface automatically updates to reflect the current ne24.24M expansion slot configuration. The logic output expansion module can be installed into any slot, however only one logic output module can be installed. Please note that while field installation is not complicated, there is a risk of ESD (electrostatic discharge) damage to circuit board components if the board is improperly handled. To install an additional expansion module, refer the following procedure to a qualified service technician:

- 1.) Remove AC power cord from back of unit and place unit on grounded work surface.
- 2.) Remove the seven top cover screws and remove cover. Remove expansion slot covers from back panel.
- 3.) Discharge any personal static by touching a grounded object. Carefully remove the new expansion card and flat cable from the ESD protective bag.

- 4.) Follow the instructions in the above drawing for installing expansion modules. Ashly recommends placing input expansion modules starting with EXP1, and placing output expansion modules starting from EXP 4 and working backwards. This way input and output channels are continuously numbered up from channel 1.
- 6.) In some cases it may be necessary to remove an existing expansion card before installing a new one. Certain motherboard flatcable headers may be inaccessible with modules installed above them.
- 7.) Make sure all hardware is secure, then replace the top cover.

For further information on expansion module assembly or proper ESD protection, please contact the Ashly service department.

7. PROTEA SOFTWARE

Load the software

Ashly Protea software is available for free on the Ashly website. Ashly no longer provides a software CD-ROM with new products. Download and launch <ProteaSoftwareSuite_xxx> to install the software. A note about firewalls: When running Protea software on a PC for the first time, Windows may prompt the user to allow the software through the firewall. Allow this. Once the software is properly installed, Windows must be configured to permanently allow a firewall exemption for Protea software.

Connect to Ethernet

The Ethernet control connection is made using an RJ-45 terminated eight conductor cable connected directly to a computer or indirectly over a standard 10/100M Ethernet network. Maximum cable distance for Ethernet is 100 meters from the nearest hub or switch for copper twisted pair CAT5 cable. For more detailed information about the proper implementation of an ethernet network, review one of the many comprehensive Ethernet networking guides available on the internet.

Identify the processor in software

Once the software is loaded to the computer and an Ethernet connection has been made to the ne24.24M processor, all Ashly network enabled products installed on that network will be detected and shown in the active device listing on the left side of the software startup canvas. In addition to detecting which models are currently online, any factory installed options are also detected and the software control surface for the new NE product automatically displays available controls for the options present. *Note: In the event of multiple processors of the same model on the network, the user can find a single physical unit by right clicking over the unit's name in the drop down menu or picture on the canvas, and then click <Identify>, which will flash the Com LED on that unit's face panel for two seconds.*

The software scans for active Ashly devices on power-up, but the user can manually scan at any time as well with <Scan For Devices> at the bottom of the network device listing tree. Also, all Ashly devices continuously broadcast their availability to the software. All currently connected and active devices are highlighted in green, while devices which may be or have been formerly installed but are currently off-line or unavailable show up in red. Individual devices can be dragged onto the project canvas to simulate physical rack installation groups, but each product can be adjusted from either the device list or canvas.

Protea software project canvas

The project canvas is used to visually represent and control a fixed physical sound system installation, and can display any networked Ashly device used in that system. The user can also place an assortment of isolated control objects such as level faders, single LEDs, meter bars, etc, and map them to specific product functions within that project. Once a control object is placed, right click on it to bring up its properties. Lines, rectangles, text, even image files can be added to create a custom virtual control screen along with Ashly devices and individual control objects. To see all available canvas tools, right click anywhere over open canvas. Checking <Design Mode> allows placed objects to be moved around, while unchecking <Design Mode> locks objects in place.

8. AUDIO FUNCTIONS

8.1 Input Functions

Editing of audio controls is done in Protea software. Input and output expansion cards are autodetected, and the software automatically updates to display the current ne24.24M status. Note: Accidental, potentially destructive loudspeaker damage can occur when abrupt changes are made to EQ, filter, or level controls, so plan carefully before making radical changes to a live sound system. The following functions are available on all inputs; mute, preamp gain, signal generator, input gain, delay, EQ, noise gate, autoleveler, ducker, and matrix routing.

8.1a Input Mute

This turns off the input channel without changing gain settings. When an input channel is muted, that channel's red mute LED on the face panel is lit.

8.1b Input Preamp

This determines the up-front analog gain to an input signal. A good rule of thumb is to allow 20dB of headroom above the nominal input signal level. Clipping occurs at +20dBu, so a microphone nominally generating a -40dBu signal should have +40dB of gain, a 0dBu line level input would be set to 0dB gain, etc.

8.1c Phantom Power



+48V Phantom power for condenser microphones can be provided to individual channels by checking the <+48V Phantom Power> box in the preamp block for a given channel.

8.1d Push To Talk Mic

This check box and drop down menu selects the back panel logic input to serve as a contact closure input channel engage.

8.1e Signal Generator

A selectable 0dBu white or pink noise generator is available just before the input meters and input gain tool. If the signal generator is enabled by un-checking the bypass button, the noise gate for that input becomes disabled.

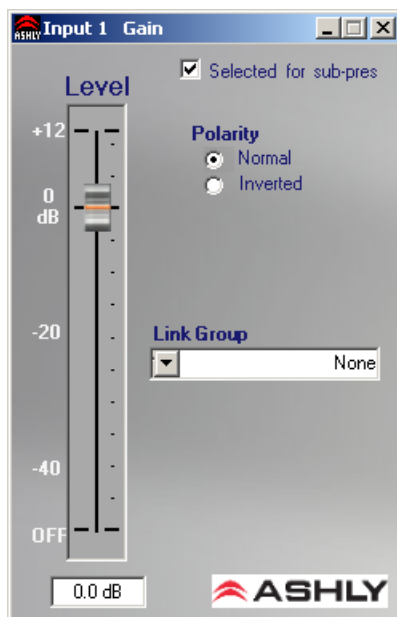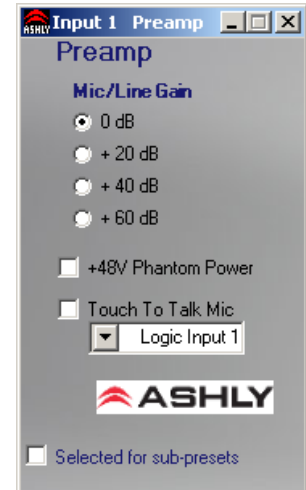


8.1f Input Gain

Different from the preamp block, input gain adjusts signal level from +12dB to Off. Due to limitations within the graphical interface, fine tuning gain settings in 0.1dB steps is accomplished using the <up/down arrows> on the keyboard. Changes of 3dB are quickly accomplished using <PageUp/PageDown> buttons. To instantly return a gain setting to 0dB, press <Ctrl + click>.

8.1g Input Delay

In large installations or outdoor venues there are often many speakers in various locations to get the best coverage possible. Since sound travels relatively slow through air (1130 ft/s at 20°C), multiple loudspeaker locations can create a situation where the original audio signal, simultaneously leaving all loudspeakers, arrives at a single point in the venue at several different times. Needless to say this causes problems, and what may be

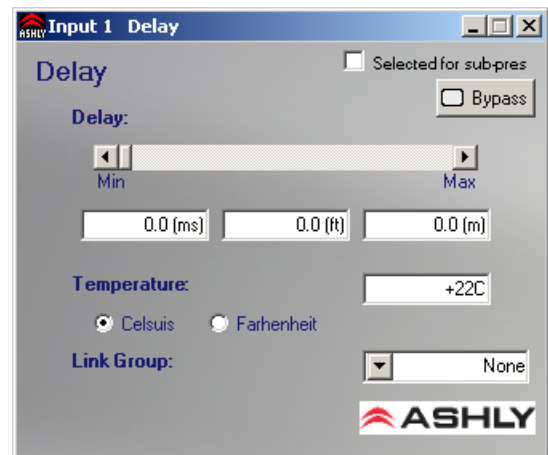

crystal clear sound directly in front of any one loudspeaker can be unintelligible at the farther reaches of the venue with direct line-of-sound to multiple loudspeaker sources.

The solution is to delay the audio signal to the loudspeakers located further away from the primary source, so that sound comes out of the distant loudspeakers at the exact time that sound from the main loudspeakers arrives. Within the Protea ne24.24M, up to 682 milliseconds of time delay are available on each input channel, allowing secondary loudspeakers to be time aligned with the primary speakers up to 771 feet (235m) away. Set the TEMP text box to the current air temperature to get the most accurate display of delay distance.


Fine tuning delay settings is accomplished using the <up/down arrows> on the keyboard. Course changes of 1mS are quickly accomplished using <PageUp/PageDown> buttons.

8.1h Input EQ


The Protea ne24.24M input EQ section offers 15 custom filters per input. Types of filters available for each band include parametric, 1st order and 2nd order low shelf, 1st order and 2nd order high shelf, and all-pass.

Shelving EQ filters: 1st order filters use a gentle 6dB per octave slope, while 2nd order filters use a 12dB per octave slope for a more pronounced boost or cut. All shelving filters have a boost/cut range of +/-15dB. Low shelving filters have a frequency range from 20Hz through 2kHz, and the high shelving filters range from 3.886kHz through 20kHz. Shelving filters are most useful as broad tone controls to boost or cut the high end or low end of an audio signal's frequency content. Because they affect a wider spectrum of audio, they are not as suitable for feedback control as parametric filters. Course and fine tuning of shelving filters can be performed using <page up/page down> and the <up/ down arrows> on the keyboard.


Parametric EQ filters: These are peak filters with the ability to control boost or cut, frequency center, and bandwidth, also called "Q" for this type of filter. Think of one band of parametric EQ as a single graphic equalizer fader except that the frequency is variable, not fixed, and that the bandwidth, or how "wide" the filter affects the frequency spectrum at the center frequency, is completely variable. The smaller the bandwidth (higher Q), the less the audio signal on either side of the frequency center is boost or cut, whereas a larger "wider" bandwidth (lower Q) produces an audible change to the overall tone of a signal. Parametric filters are best used to hunt down and eliminate problem feedback frequencies, add or remove a characteristic "hot spot" from microphones, or clean up room resonance situations. It is well worth the time becoming proficient with parametric EQ filters, as they offer the best solution to many EQ problems.

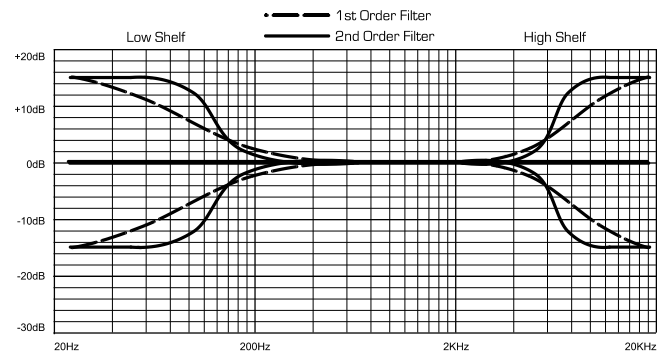

ne24.24M Shelving Filters

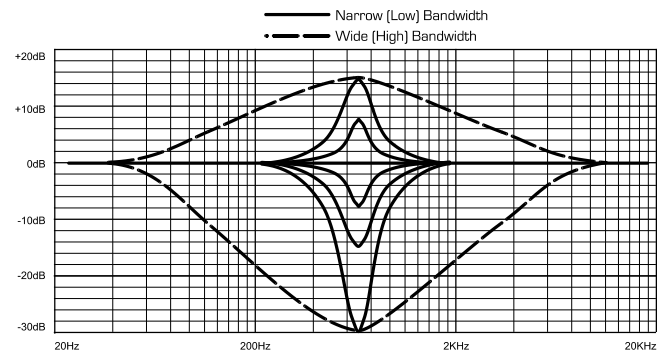


ne24.24M Parametric Filters

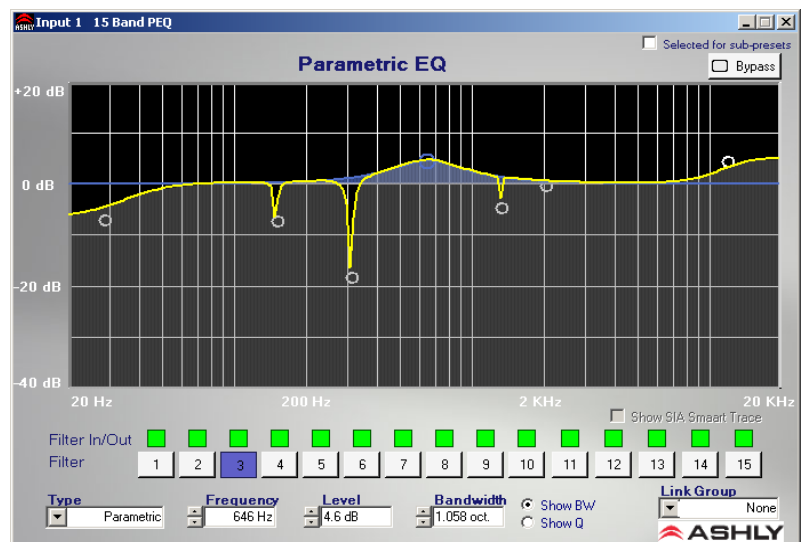

Protea ne24.24M parametric filters have a boost/cut range of +15dB to -30dB. There is more cut than boost because one of the more common uses for parametric filters is to dramatically cut, or “notch out”, very narrow frequencies (low bandwidth) in order to eliminate system feedback problems. Every parametric EQ filter has a center frequency. The factory default is 1kHz, but each filter is adjustable from 20Hz to 20kHz in 1Hz steps. Carefully sweeping a narrow bandwidth filter through a problem feedback area, with just a slight boost, is a quick way to find the exact frequency causing feedback trouble. Once the offensive frequency has been found, cut the filter’s level, and then adjust the bandwidth as narrow as possible while still eliminating the feedback problem. Bandwidth is adjustable from about 1/64 octave to four octaves, and the lower the bandwidth (higher Q), the less audible the filter action will be. Finding the problem frequency is relatively easy, but finding the best combination of cut and bandwidth takes a little practice. Again, it is well worth the time getting comfortable with the notching procedure, so that problems can be quickly addressed with a sufficient but minimal amount of corrective EQ.

All Pass filters: All pass filters have no effect on frequency amplitude, but rather are used to adjust the phase response of the signal at a given frequency, and are often used in conjunction with a frequency-domain filter to correct phase changes. At low frequencies, there is 0 degree phase shift, at the all-pass filter center frequency there is -180 degrees of phase shift, and at high frequencies there is -360 degrees of phase shift. Each input channel has an EQ on/off button for all filters, and in turn each filter band has its own bypass button. The flatten curve function returns all filters to 0dB, but preserves the frequency and bandwidth of any used filters.

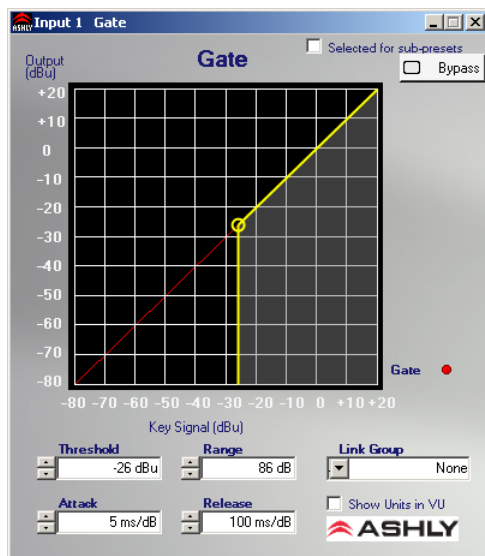

8.1i Noise Gate

Noise gates are used to minimize unwanted or ambient low level signal from an individual mic input. THRESHOLD is the level above which an input signal will pass through, and below which its signal is turned off. RANGE is the amount of attenuation in dB which the noise gate attenuates the signal when the gate is off. ATTACK and RELEASE control the time characteristics of the gating action. Attack sets the amount of time it takes for the gate to open or gated signal to turn on. Release sets the time required for the gate to close back up when the input signal falls below threshold.

8.1j Autoleveler

An autoleveler is a dynamics processor used to automatically boost or cut a signal to a user defined target level. TARGET LEVEL is the primary setting in an autoleveler, as it determines the desired constant level to which an input is boost or cut. Both basic mode and advanced mode utilize the target level control, but basic mode simplifies setup.


In BASIC MODE, target level, action, and maximum gain are the available controls. ACTION is selectable to gentle, normal, or aggressive, and automatically adjusts the following controls found in advanced mode:

Action	Ratio	Hold Time	Gain Incr. Rate	Gain Dec. Rate
Aggressive	10:1	0 Sec	20ms/dB	5 ms/dB
Normal	4:1	1 Sec	50ms/dB	10 ms/dB
Gentle	2:1	2 Sec	100ms/dB	20 ms/dB

MAXIMUM GAIN controls the threshold below target using the following formula:

$$\text{Thr} = \text{Max Gain} / (1/\text{Ratio} - 1)$$

In advanced mode, THRESHOLD BELOW TARGET determines the input signal level relative to the target level, above which the autoleveler increases gain, and below which no action is taken. RATIO is defined as the relationship of input level change in dB to output level change in dB. It is a measure of how aggressively the autoleveler changes the gain to maintain a constant output target level. GAIN INCREASE RATE and GAIN DECREASE RATE are used to prevent sudden, choppy sounding level changes to an input signal having a wide dynamic range. HOLD TIME is used in conjunction with gain change rate, and is defined as the time after the input signal falls below

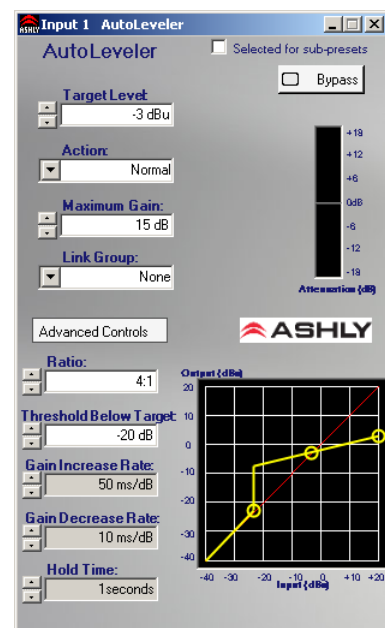

the threshold during which the autoleveler's gain is held constant before it returns to unity gain. The purpose is to reduce the amount of gain "chatter" and abrupt signal cutoff when the input signal is hovering around the threshold level. Advanced settings which are different than the three basic action settings results in a USER DEFINED display in the basic action control.


8.1k Ducker

A Ducker is used to attenuate the level of selected input channels when one or more "Trigger" inputs have signal present. Input channels can be set to one of four ducker modes:

- 1.) BYPASS - no ducking action applies.
- 2.) DUCKED PROGRAM - signal present on other "Trigger" selected input channels act to attenuate this input channel.
- 3.) LOW PRIORITY TRIGGER - signal present on this input channel attenuates all other inputs set to "Ducked Program".
- 4.) HIGH PRIORITY TRIGGER - signal present on this input channel fully attenuates all other inputs set to "Ducked Program", as well as all other channels set to "Low Priority Trigger".
- 5.) FILIBUSTER - signal present on this channel fully attenuates all other channels until the signal drops below its threshold to allow other channels to come on.


TRIGGER THRESHOLD determines the signal level on a trigger input at which point the ducked program is attenuated. DUCKING DEPTH determines how much attenuation is applied to input channels set up as ducked program.

DUCKING RELEASE determines the rate at which the attenuation returns to 0dB after the trigger input signal has stopped.

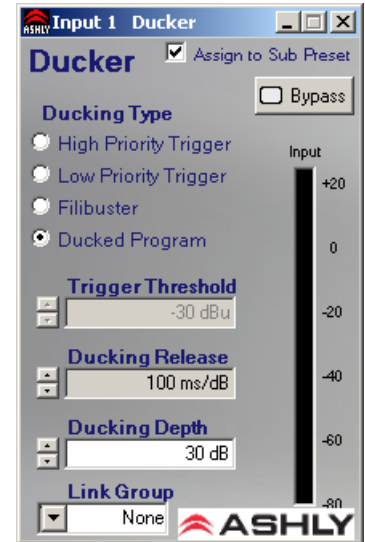

8.1l Matrix Routing

Any input channel can be routed to any or all output channels, likewise any output channel can have as its source any or all inputs, limited only by the installed capacity of input or output expansion modules. To route an input to an output, click and drag from the input connect box to the desired output connect box (click and drag routing works in both directions). To delete a connection, click on the connect line and press <Delete> on the keyboard, or right click on the connection line for the delete prompt. To quickly perform multiple routing connections or disconnections to the current input channel, hold <Ctrl> and click on desired individual output channel connect boxes to toggle them on or off. Anytime a connection is made, the corresponding output mixer level is set to "-inf", (off).

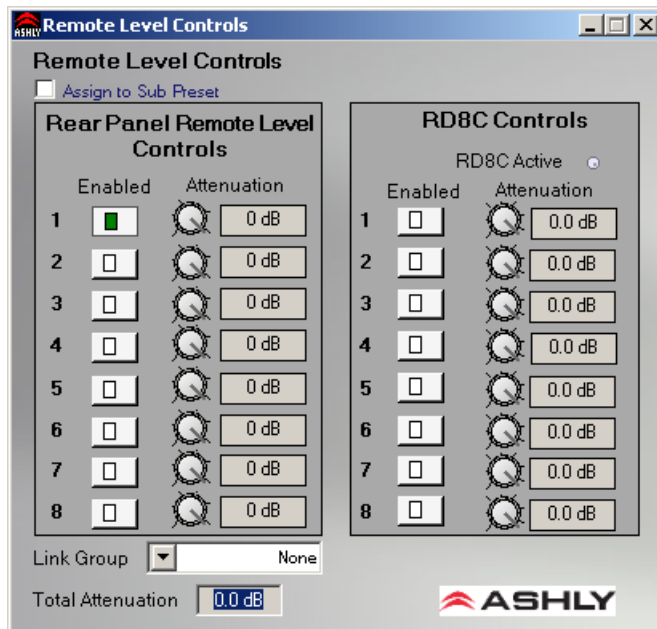

8.1m Input Remote Level Control

Each input channel can be remotely attenuated through the back panel 0-5V remote level control pins in conjunction with the Ashly WR-1, WR-1.5, or by an Ashly RD-8C active remote attenuator connected to the 4-pin data connector on the back. The remote level controls dialogue box then allows arbitrary assignment of the remote's attenuator channels to the ne24.24M's audio channel.


Output Functions

8.2 Output Audio Functions

The following functions are available on all outputs: Mixer, high pass/low pass filter, delay, EQ, gain, limiter, and mute.


8.2a Output Matrix Mixer (Input Mixer)

Output channels can have any or all inputs as sources, and the output matrix mixer allows the level of each connected input to be adjusted in the matrix mix to each output. Note that for a given output, unlinked inputs are disabled in the mixer. Adjustment range is from +12dB to off. To set a level control to unity (0) within the matrix mixer, select an input level control by clicking on it and pressing <ctrl> + <click> on the level adjustment control. Individual input channels in the matrix mixer can be muted independently from the main input or output mute blocks. An RD-8C can be installed to remotely control the input levels for this ne24.24M output, if the "Assign RD-8C" box is checked. Note: Only one RD-8C can be used per ne24.24M. Ducking at the mixer can be enabled here as well.

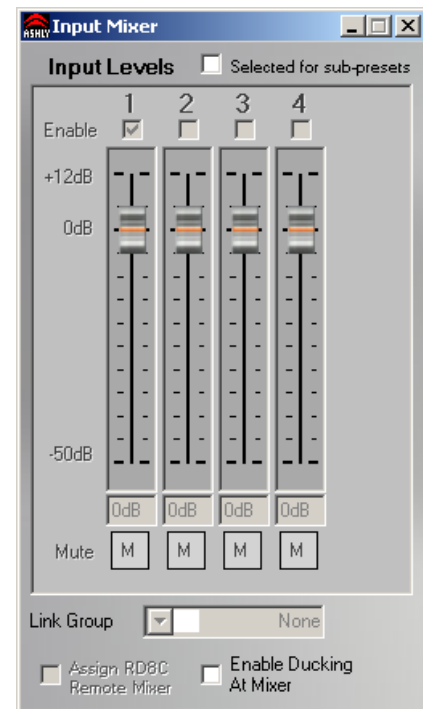

8.2b Hpf/Lpf - Crossover

Bandpass or crossover functions on the ne24.24M are available only on the output channels. Every channel's crossover consists of a high pass filter (HPF) and a low pass filter (LPF), along with the frequencies and filter types used. Each output's crossover section is essentially a bandpass filter, making it necessary for the user to map out ahead of time which outputs will be used for the various frequency bands, and set the overlapping filter frequencies and types accordingly. Note: The high pass filter determines the lower frequency limit of the signal, while the low pass filter determines the upper frequency limit. Be careful not to accidentally send low frequency signals to high frequency drivers. Check the loudspeaker specifications to determine a safe operating frequency range. The frequency range for the high pass filter (HPF) is 20Hz to 20kHz, with an option to turn the filter off at the low end of the frequency selection. The low pass filter (LPF) offers the same frequency range, with the "off" option at the high end of the frequency selection. There are eleven types of filters available in the crossover section, each suited to a specific preference or purpose. The slope of each filter type is defined by the first characters in the filter type, 12dB, 18dB, 24dB, or 48dB per octave.

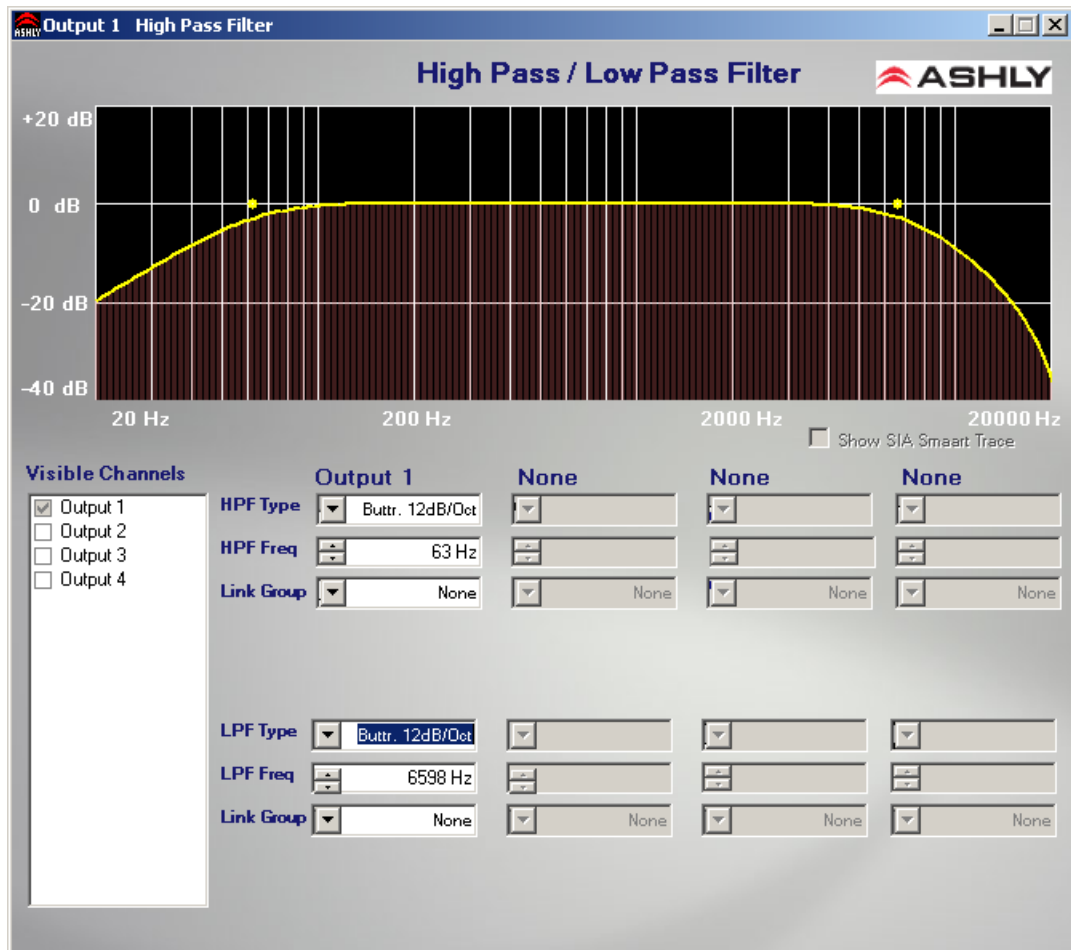

The steeper the slope, the more abruptly the edges of the pass band will drop off. There is no best filter slope for every application, so experiment to see which one sounds most pleasing in a specific system. The Ashly default crossover filter is 24dB/octave Linkwitz-Riley, but can be changed to suit the application. In addition to the frequency and slope, crossover filters can be selected as having Butterworth, Bessel, or Linkwitz-Riley response. These refer to the shape of a filter's slope at the cut-off frequency, affecting the way two adjacent pass bands interact at the crossover point. 24dB/octave Linkwitz-Riley filters produce a flat transition through the crossover region, assuming both overlapping filters are set to the same frequency, slope, and response type. **24dB/oct Linkwitz-Riley filters are the industry standard, the easiest to use, and the filter type recommended by Ashly.** Other filter types are available, but may require polarity switching or other adjustments for proper results. The following paragraphs offer a summary of the three filter types as used in the ne24.24M crossovers.

Butterworth

Butterworth filters individually are always -3dB at the displayed crossover frequency and are used because they have a “maximally flat” passband and sharpest transition to the stopband. When a Butterworth HPF and LPF of the same crossover frequency are summed, the combined response is always +3dB. With 12dB per octave Butterworth crossover filters, one of the outputs must be inverted or else the combined response will result in a large notch at the crossover frequency.

Bessel


These filters, as implemented on the ne24.24M, are always -3dB at the displayed crossover frequency. Bessel filters are used because they have a maximally flat group delay. Stated another way, Bessel filters have the most linear phase response. When a Bessel HPF and LPF of the same crossover frequency are summed, the combined response is +3dB for 12dB/oct, 18dB/oct, and 48dB/oct Bessel filters, and -2dB for 24dB/oct Bessel filters. One of the outputs must be inverted when using either 12dB/oct or 18dB/oct Bessel crossover filters or else the combined response will have a large notch.

Linkwitz-Riley

The 12 dB/oct, 24dB/oct, an 48dB/oct Linkwitz-Riley filters individually are always -6dB at the displayed crossover frequency, however the 18dB/oct Linkwitz filters individually are always -3dB at the displayed crossover frequency. The reason for this is that Linkwitz-Riley filters are defined in terms of performance criterion on the summing of two adjacent crossover HPF and LPF filters, rather than defined in terms of the pole-zero characteristics of individual filters. The 18dB/oct Linkwitz-Riley individually are 18dB/oct Butterworth filters in that they have Butterworth polezero characteristics and also satisfy the criterion for Linkwitz-Riley filters. When a Linkwitz-Riley HPF and LPF of the same crossover frequency are summed, the combined response is always flat. With 12dB/oct Linkwitz-Riley crossover filters, one of the outputs must be inverted or else the combined response will have a large notch at the crossover frequency.

8.2c Output Delay

Output delay can be used to time align discrete drivers within a cabinet or cluster using short delay times, or align multiple drivers in different locations using longer delay times. The following example illustrates a use of short delay to time align speakers within a group: A typical three way speaker cluster has low end, midrange, and high frequency drivers all located near one another. The different drivers for each frequency band are not necessarily the same physical depth with respect to the front of the loudspeaker cluster, so there exists the problem of the same signals (at the crossover points) arriving at the cluster wavefront at different times, creating undesirable wave interaction such as frequency peaks or cancellation. The solution in this case, rather than fixing the frequency anomalies with EQ, is to slightly delay the signal to the drivers closest to the cluster front. Using the location of the driver diaphragm farthest back as a reference point, measure the distance to other drivers in the cluster, and set the output delay for each accordingly, with the driver diaphragm closest to the front getting the longest delay and the driver at the very back getting no delay at all. The minimum adjustment is 0.02 milliseconds, or about 1/4 inch. Always time align loudspeakers before applying EQ.

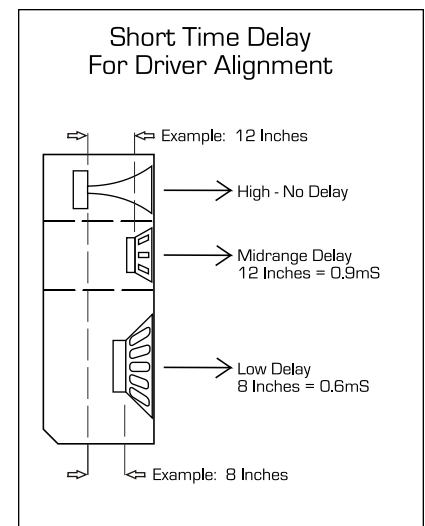

8.2d Output EQ

The ne24.24M output EQ section is the same as the input EQ, with the exception of the ability to view the combined effect of input EQ for each installed and linked input channel to a given output channel. Within the output EQ frame, each installed and linked input channel has its own <Overlay Input EQ> check box, through which the interaction between input and output EQ is displayed.

8.2e Output Gain

Output gain operates in the same manner as input gain, ranging from +12dB to Off, with an option to reverse polarity.

8.2f Output Remote Level Control

Each output channel can be remotely attenuated through the back panel 0-5V remote level control pins in conjunction with the Ashly WR-1, WR-1.5, or by an Ashly RD-8C active remote attenuator connected to the 4-pin data connector on the back panel.

8.2g Output Compressor/Limiter

A full function compressor/limiter is included on each output channel. A limiter is commonly used to prevent transient audio signal spikes from damaging loudspeakers, manage analog and digital recording levels, optimize broadcast levels, or “thicken” the sound of an audio source (compression). The adjustable parameters include limiter in/out, threshold, ratio, attack time, release time, link group, and attenuation bus. The ne24.24M limiter threshold range is -20dBu to +20dBu, or -24VU to +16VU if the metering option is selected to VU.

The threshold control determines the signal level above which gain reduction begins, and is indicated by an amber LED (S/L) on the ne24.24M face panel, as well as indicated in the matrix meters in software. Increases in audio level above the threshold will be reduced according to the ratio settings.


The ratio control determines the amount of gain reduction above limiter threshold. Ratio ranges from a gentle 1.2:1 to a very abrupt INF:1. To illustrate how the ratio control works, imagine a commonly used loudspeaker protection ratio of 10:1, which means that for every input signal increase of 10 dB above threshold, the output level will only increase by 1dB. The higher the ratio, the more pronounced the audio effect, so use the lowest ratio possible to sufficiently address the problem.

Attack and release settings adjust the time it takes the limiter to engage and then disengage when the signal increases above threshold and then subsequently falls back below threshold. Attack time is adjustable from 0.2ms/dB through 50ms/dB, while release time ranges from 5ms/dB through 1s/dB. A very fast attack time can sound unnatural, while a very long attack time can miss some of the initial transient. Similarly, a very short release time can make the audio sound uneven, while a very long release time can create “pumping”, or “breathing” characteristics depending on the kind of signal. Experiment to find the best solution for a given application.

The attenuation bus allows up to four output channels within a group to share a threshold detector, so that any channel with a transient signal above threshold will apply equal gain reduction to all other channels within that group which is assigned to the link bus. The channel which furthest exceeds threshold will determine the resulting reduction on all channels selected to the attenuation bus. The channel limiter attenuation bus is useful when processing stereo signals.

8.2h Output Mute

Output Mute turns off an output channel. When an output channel is muted, that channel’s red mute LED on the face panel is lit. To mute or unmute all outputs at once, go to the <Mute> menu heading.

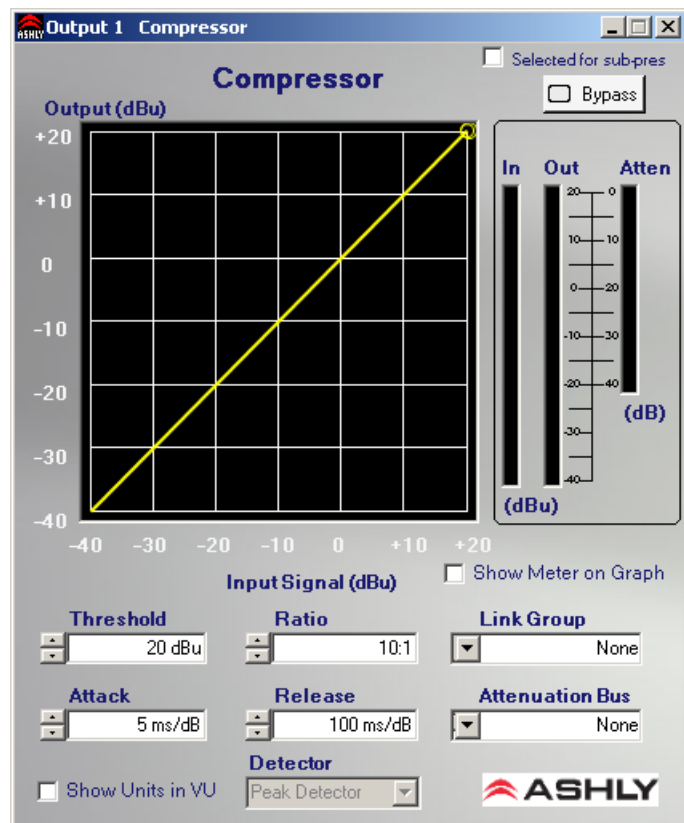

9. OTHER SOFTWARE FUNCTIONS

9.1 Device Options

Flash Reprogram: The ne24.24M firmware (the internal program that runs the unit) can be updated/reprogrammed via the Ethernet control connection. The latest firmware files are available on the Ashly web site, and installed according to the <Flash Programmer> dialogue box. This process may take several minutes, and during the file transfer all channels are muted and both sampling rate LEDs will be lit.

Link Configuration: Linking allows multiple DSP processing blocks on different channels or even on different Ashly devices to track each other. For example - if two graphic equalizers on different channels are linked, any change made to one of the equalizers will result in an identical change to the other. Most DSP blocks can be linked to one of eight link groups. When a DSP function is assigned to a link group, both a colored tab and the link group number appear beneath the DSP block icon. The link group's tab color, group name, and local/network (link across devices) status is assigned in the link configuration dialogue box. Note: If a WR-5 or RD-8C is connected to a ne24.24M via the RS-232 data port, and a DSP function that can be controlled by the WR-5 or RD-8C (such as gain) is linked across multiple ne24.24M units, changes made by that WR-5 or RD-8C will *only* affect the ne24.24M connected via RS-232. In other words, linked DSP changes across multiple ne24.24M units must come from software, not the remotes.

Preset Switch Settings: This disables or enables the front panel preset select switch

Turn On Unmute Delay: All inputs and outputs are muted during device turn on, and this control determines the length of time it takes to unmute.

WR-5 Options: The WR-5 checksum option was originally created to monitor and verify data communications between the WR-5 and ne24.24M in extremely harsh RFI environments, where strong RF signal was degrading the WR-5 control data. In typical installations it is not necessary to enable this feature.

9.2 Preset Options

Presets: The ne24.24M will store up to 31 named internal presets, each preset storing control data for all channels and audio functions. Preset names must be 20 characters or less. Changes to an individual preset can be saved to the ne24.24M using <Save preset to device>, or saved to the PC using <Save preset to file>. Individual preset files use the extension (*.pne).

Sub Presets: Instead of saving or recalling an entire preset affecting all functions, a sub-preset affecting only a sub-set of functions may be used. To save a sub-preset to the ne24.24M or computer file, check the boxed labeled <Selected for sub-presets> in the audio control functions to be stored in the sub preset, and then click <Preset Options>, then <Save sub preset to device/file>. Presets or sub-presets saved as computer files can only be loaded to the ne24.24M using software. Presets or sub presets saved to the ne24.24M device can be loaded using software, selected and loaded using the preset button on the front panel, or with contact closures. Contact closures can load presets 1-8 saved on the ne24.24M using switches wired to the rear panel contact closure connector (see sec. 5.4). Note: A preset recall event will overwrite any unsaved changes, so be sure the current configuration is saved before continuing or it will be lost. The ne24.24M always loads the last working settings on power-up, so as to preserve any changes should the power be inadvertently turned off prior to saving a preset. *Caution: A new preset may have dramatically different settings capable of damaging sound system components, so be careful not to recall the wrong preset while the system is on.*

Preset Utility Functions:

Enter/Edit Preset Name: Allows changes to the name of the currently loaded preset

Clear All DSP Functions: This only works on Ashly devices with pluggable DSP blocks. It does not affect the ne24.24M.

Generate Sub Preset Report: Creates a text file of current preset settings which can then be placed on Windows clipboard.

Save All Presets From Device To File: Use this to backup all 31 ne24.24M presets to a PC file. Presets are saved as a *.pre file

Load All Presets From File To Device: Use this to load all 31 presets previously saved as a *.pre file to the ne24.24M.

9.3 Copying Settings to Another Input Or Output

To quickly transfer all settings from one input or output to another input or output channel within the same unit, right click on the channel number and choose from the available options to copy, paste, or link with another channel.

9.4 Security

There are multiple user/multiple levels of protection assignable to the ne24.24M within the software <Security> pull down menu, from full access to view only, with user ID and passwords assigned for each available unit. The ne24.24M security data is stored within the unit, not Protea software. *Passwords are case sensitive.* Be sure to write down the password and store in a convenient place for future reference. If the password is forgotten, a limited password reset can be done by pressing and holding the factory reset switch for two seconds during power up. Note: Holding the reset switch for a full 10 seconds during power up will perform a full factory reset, changing all settings to the factory default and erasing all presets.


9.5 Metering

Separate software tabs allow for input/output metering in dBu, as well as dynamics metering in dB.

10 REMOTE CONTROL

Ashly makes several remote control options which can be used with the ne24.24M. The WR-1, WR-1.5, and WR-2 are passive wall-box mounted remotes which can adjust volume or select presets. The WR-5 and neWR-5 are active programmable button controllers with user defined button functions and an LED display, also wall-box installed. Each requires a standard decora plate, purchased separately.


The RD-8 and FR-8/16 are programmable fader remotes, and do not require an additional decora plate.

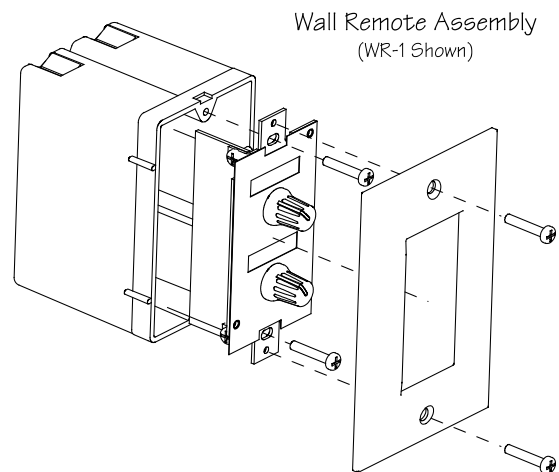

10.1 WR-1 Volume Control

The WR-1 is an assignable, dual potentiometer remote volume control for the ne24.24M. Each volume control is connected to a terminal block on the WR-1 circuit board, which in turn must be wired to the ne24.24M back panel euroblock connector labeled “0 - 5 Volt Remote Level Control”. Do not connect the WR-1 remote level control ground to any other external grounds. By connecting a volume control to a specific pin (1-8), that pin can be assigned in an input or output main control surface “Remote” tool to control level. It is possible to simultaneously select the same input or output channel to multiple remote level control pins. Note, however, that the resulting attenuation on that channel is cumulative, meaning that channel’s gain is set by combining the value of all remote level controls assigned to that channel.

In addition to using a WR-1 as the control device, the remote level control feature can be used for relay activated muting of selected channels, as in a fire alarm application. Level control is “attenuate only” meaning that the maximum setting of the control potentiometer (fully clockwise) results in 0 dB gain of the controlled channel. A label template can be found on the Ashly website for printing input or output channel names under control of the WR-1 and sliding the paper behind the mylar overlay windows.

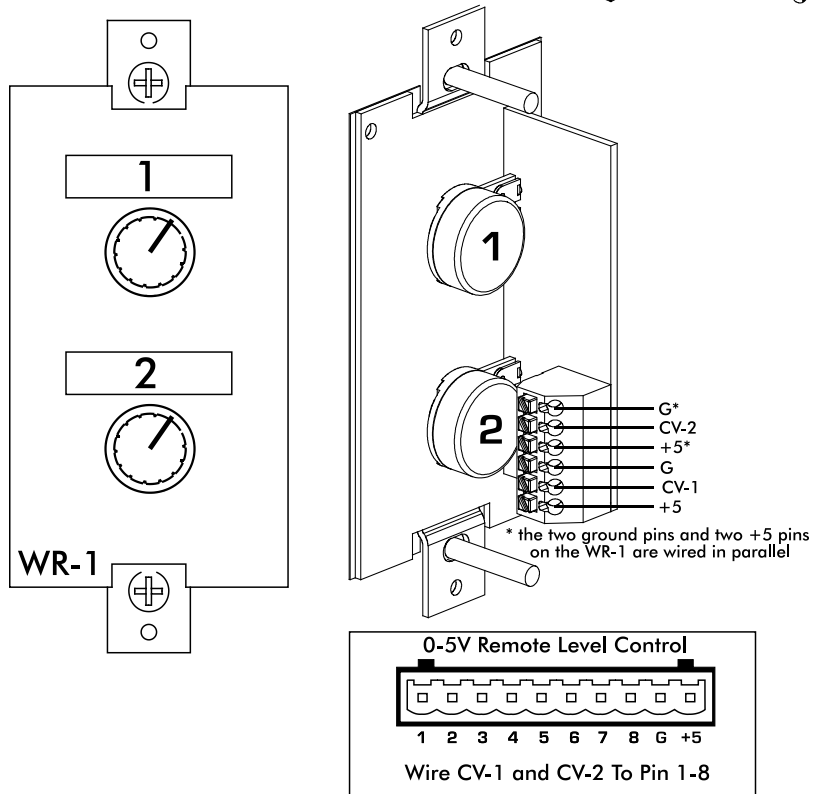


The two +5V pins and two ground pins on the WR-1 euroblock connector are tied together on the circuit board, so it is only necessary to run one +5V line and one ground line to the WR-1 from the ne24.24M. These pins are provided for daisy-chaining multiple WR-1 controllers together.

10.2 WR-1.5 Volume Control and Preset Recall

The WR-1.5 combines the level control capability of the WR-1 and the preset recall capability of the WR-2. A single potentiometer and a four position rotary switch offer independent control of level and preset recall.


Remote Level Control - The WR-1.5 connects to the "0-5V Remote Level Control" pins as shown for the WR-1. The connected CV input must then be assigned to an input or output channel remote level control function in Protea Software.


Preset Recall - Up to four preset recall wires connect to the ne24.24M "Logic Inputs" connector, along with the preset recall ground wire. The terminal numbers 1-8 on the ne24.24M correspond to the first 8 preset memory locations in that ne24.24M. Do not connect the WR-1.5 remote level control ground to any other external grounds.

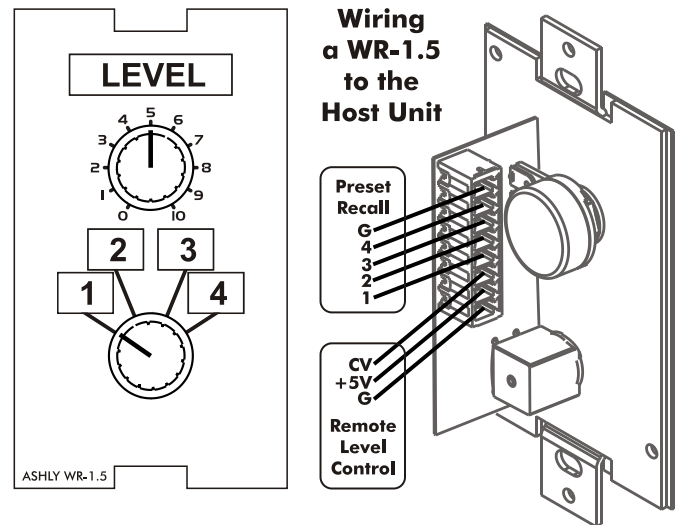

10.3 WR-2 Preset Recall

The WR-2 allows for remote selection of one of eight possible ne24.24M presets via interlocking push-button switches. Each pushbutton switch connects to a terminal block pin on the WR-2 circuit board, which in turn must be wired to the ne24.24M back panel euroblock connector labeled "Logic Inputs (Preset Recall)". Do not connect the WR-2 remote level control ground to any other external grounds. The terminal numbers 1-8 correspond to the first 8 Preset Memory locations in the ne24.24M. Pressing a button will load the corresponding preset. A label template can be found on the Ashly website for printing preset names for the WR-2 and sliding the paper behind the mylar overlay windows.

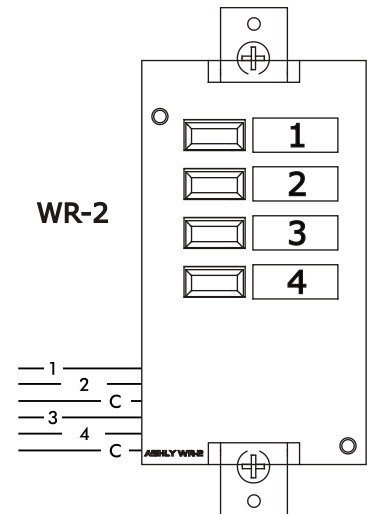

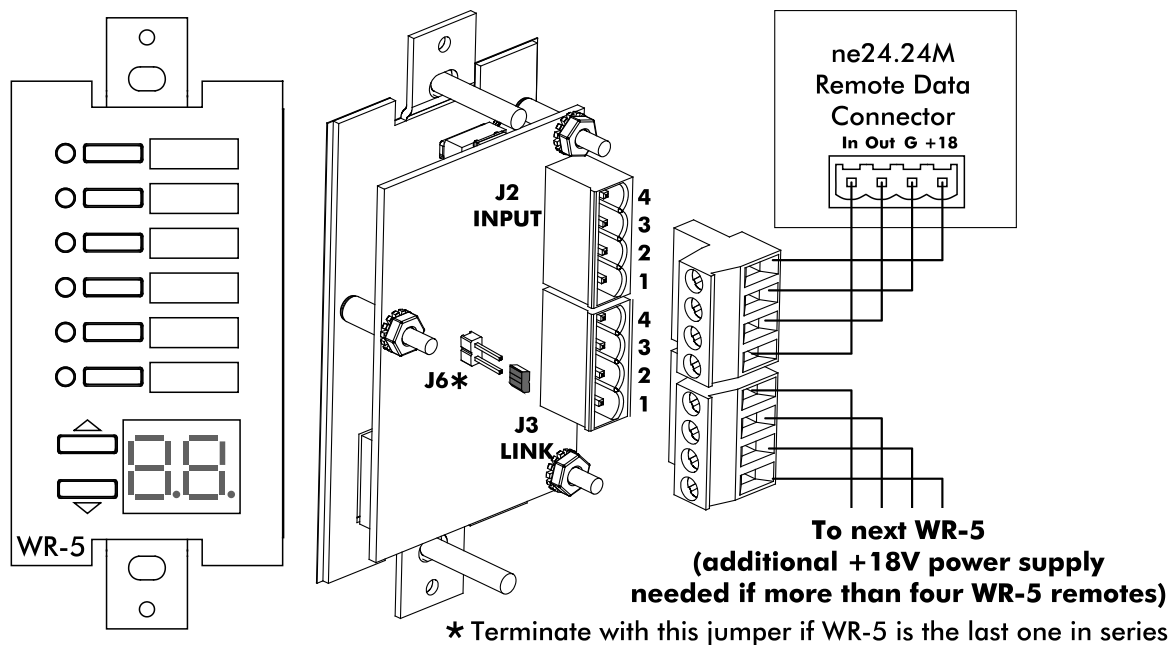


10.4 WR-5 Programmable Zone Controller

The WR-5 is a microprocessor based programmable remote control unit. Using Protea software, six function select buttons and two parameter adjust buttons are used to control a limited range of assigned functions within the WR-5's host ne24.24M. Up to four WR-5 units can be daisy-chained and phantom powered from one ne24.24M, and even more can be added using an in-line power supply adapter such as the Ashly RPS-18. Note: When a WR-5 is wired to a ne24.24M, no other serial communications devices, including the Ashly RD-8C, may be used with that ne24.24M.

The WR-5 is designed to fit into a standard US electrical wall box. Electrical connections to the ne24.24M are made using a four conductor low gauge wire terminated with euroblock connectors. There is also a two pin jumper labelled "J6" which requires the provided female jumper to be installed if the WR-5 is the last one in the data chain, even if there is only one WR-5. Note: The WR-5E is the functional equivalent to the WR-5, designed to fit into European electrical boxes. A standard decora plate (not included) can be purchased at most hardware stores to cover the WR-5 electrical box and satisfy the aesthetic needs of the installation.

Each of six buttons on the WR-5 can be programmed through Protea Software to engage one of the following functions (if available): preset recall, preset scroll, gain control, channel engage/mute, zone source selection, logic output active high, logic output active low, and matrix mixer, with a green LED next to each button to display active status. To the right of each button is a pocket in the mylar overlay for a paper function label to be inserted. The two other buttons are used to adjust function parameters, indicated by the LED display.

Further installation details are available in the documentation provided with each WR-5, also available on the Ashly website.

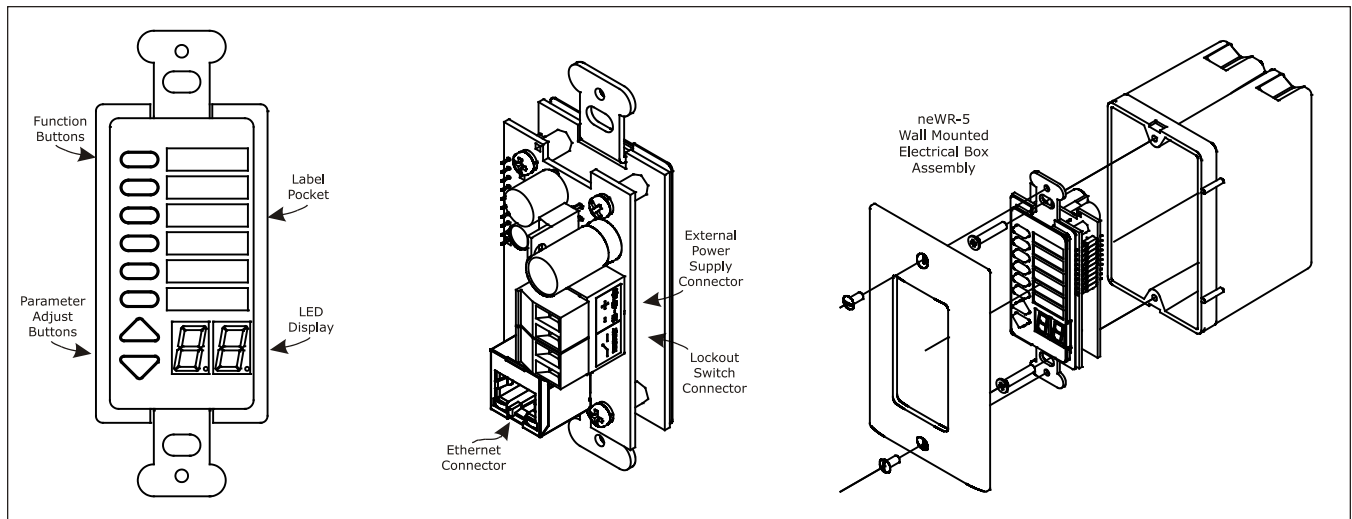

10.5 neWR-5 Networked Programmable Zone Controller

The neWR-5 remote control is a networked version of the WR-5, using Ethernet instead of the data port to communicate with the ne24.24M. Connecting and powering the neWR-5 is done using Cat-5 Ethernet cable and an IEEE 802.3af Power over Ethernet (PoE) switch, hub, or in-line PoE injector. If PoE is unavailable, the Ashly RPS-18 (sold separately) is a 15-48VDC power supply capable of at least 2 watts per neWR-5 and can be hard wired to the back of the neWR-5. PoE current draw is 38mA @48VDC and 80mA@15VDC. A decora cover plate (not included) can be purchased at hardware stores to cover the neWR-5 electrical box and satisfy the aesthetic needs of the installation.



The neWR-5 appears in the software's device list tree and must be assigned, within it's neWR-5 device window, to a specific ne24.24M for control. The neWR-5 has six programmable function buttons which can light up green, red, or amber to display status. Further information on LED status is found in the neWR-5 owner's manual. To the right of the function buttons is a pocket in the mylar overlay for a printed function label to be inserted. The two other buttons are used to adjust function parameters such as gain or preset number, and are indicated by the LED display.

There is also a hard-wired lock-out feature on the neWR-5, where the closing of a switch such as a key switch wired to the lockout Euroblock renders all buttons inactive.

10.6 RD-8C (RW-8C) Remote Level Controller

The RD-8C and RW-8C are remote level controllers which can be used with the Ashly ne24.24M to remotely control the level of any assigned input, output, or group of inputs or outputs. The RD-8C is a desktop controller using an XLR data connector to connect with the ne24.24M four pin data port, while the RW-8C is electronically the same but mounts as a wall plate into a standard 4-gang electrical box and uses a Euroblock connector.

There are eight channel faders and one master fader on the RD-8C, each with a level control and an on/off button with a green LED to indicate status. Each RD-8C slide fader can be assigned in software using the remote level control tool for one or several inputs or outputs. **Only one RD/RW-8C can be used per ne24.24M, and no other serial communications devices, including the WR-5, can be used when an RD-8C is connected to the data port.** Further installation details are available in the User Reference provided with each RD-8C or RW-8C or on the Ashly website.

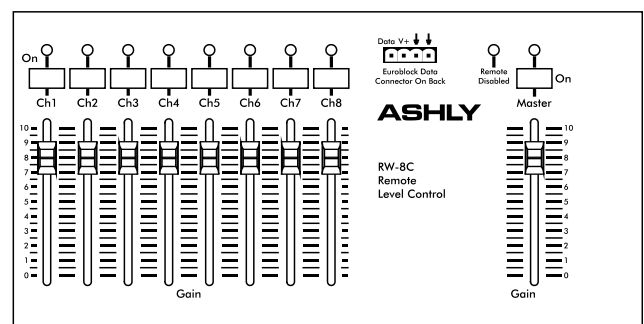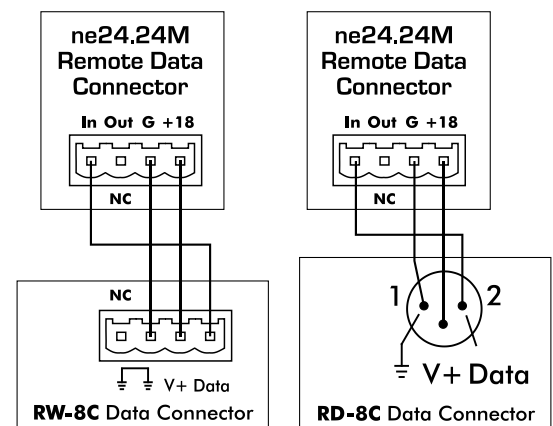

10.7 FR-8 and FR-16 Networked Programmable Fader Controllers

The FR-8 and FR-16 are Ethernet based remote controllers for all Ashly network enabled products with DSP capabilities. Each fader and its push button LED can be programmed to adjust the signal level for one input or output or group, select input source, or mute the signal. The FR remotes are ideal for networked sound systems in meeting rooms, houses of worship, courtrooms, or other applications where simple but programmable real-time level control is required.




Once installed on a network shared by the ne24.24M, the FR-8 or FR-16 will appear in the Protea software device list tree and must be assigned to the ne24.24M before programming. Primary features include:

- 8 or 16 Assignable Faders with Master
- Push Button Switches with LED
- Mute/Unmute per Fader
- A/B Source Select per Fader (optional)
- Two Signal Level Indicators per Fader
- User Defined Signal Level LED Threshold
- Assignable Fader Scaling
- Front Panel Lockout
- Communication Failure Indicator
- Automatic IP Addressing
- User Defined Label Inserts
- Powered by IEEE 802.3af Power over Ethernet
- Wall Box or Panel Cut-Out Mounting

See the FR-8/16 owners manual on the Ashly website for further details.


10.8 Ashly Remote Application for iPad®

A custom and secure touch-screen control surface for the iPad can be designed using the <Ashly Remote> application, available free on iTunes® or via the Ashly website products section. Controls, labels, and images are combined to manage key ne24.24M functions over a wireless network connection.

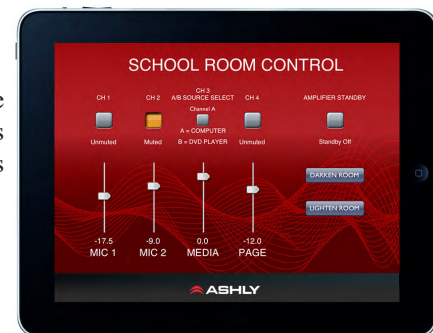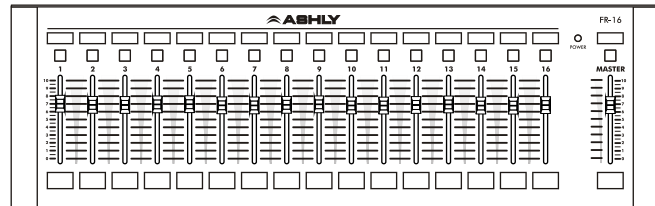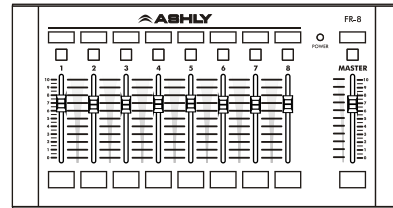

11. GPO LOGIC OUTPUT

A GPO (General Purpose Output) card can be installed as an option in any one of the four expansion slots, providing current limited 12V logic outputs for control of 12V or 5V external devices. Once the expansion module is installed, the software displays a logic output tab where each pin's logic function is defined. Logic outputs will issue either a logic high level (+12VDC at 10mA) or logic low level (0VDC). Maximum current sink is 1A per channel, +100VDC max. The high or low output state is a function of the currently loaded preset, or can be the result of a WR-5 button programmed to set the logic output to active high or active low. The logic outputs are current limited to sourcing no more than 10mA so that these outputs can be directly wired to LED indicators. Note: When a logic output card is installed, the host expansion slot's front panel LEDs will all turn red. Examples of a logic output low and logic output high application are shown below:

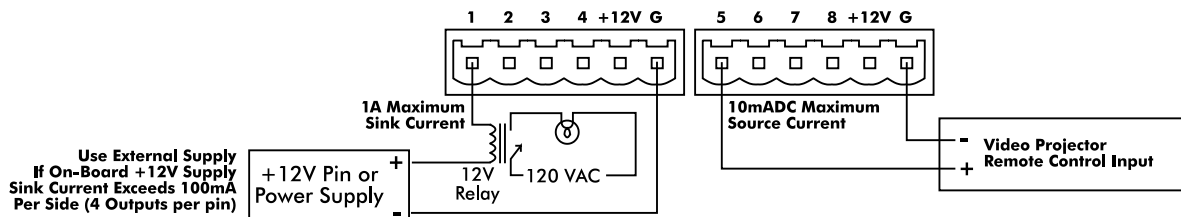

Ex. 1: Using Logic Low Output To Turn On Lights

Ex. 2: Using Logic High Output For Projector Remote Control

12. TROUBLESHOOTING TIPS

- 1) **No power** - Is the detachable AC cord fully plugged in? Is the rear panel power switch on?
- 2) **Software doesn't work on unit** - Is the ethernet connection properly made? Has the ne24.24M been identified by the software? Are the LEDs on the RJ-45 ethernet jack showing activity?
- 3) **No sound** - Check to see if the input or output is muted in software or by a remote control action. Is the input Preamp set for the proper gain? Is the input or output Gain turned down? Is the Noise Gate threshold set too high? Is the Input to Output Matrix connected as desired? Does the Matrix Mixer section have any signals turned down or muted? If used as a crossover, make sure the high pass filter (HPF) is set to a lower frequency than the low pass filter (LPF) for a given output. If using a condenser mic, is Phantom Power turned on (input Preamp)?
- 4) **Clip light stays on** - Is the input signal level too high? Is the Input Preamp gain set too high? Are input or output gain settings too high? Check to see if an EQ filter has too much boost.
- 5) **Distorted sound but no Clip LED** - Check individual EQ filters to see if there is excessive boost.
- 6) **Muffled sound** - If expecting full range audio on an output, make sure the crossover settings are not inadvertently set so as to limit the pass band.
- 7) **Excessive Noise** - Set the Input Preamp gain as high as possible while allowing 20dB of headroom before clipping occurs. Do not use input or output Gain controls for large increases (>20dB) in level from input.
- 8) **Forgot the password** - See section 9.4
- 9) In addition, check the Ashly web site to see if you are running the latest software and firmware release.

13. SPECIFICATIONS

INPUT..... Active Balanced, 18k Ohm
Max Input Level: +20 dBu
Input Gain Range: -50dB to +12dB, polarity select

OUTPUT: Active Servo-Balanced, 112 Ohm
Max Output Level: +20 dBu
Output Gain Range: -50dB to +12dB, polarity select
Frequency Response: 20 Hz-20kHz, +/- 0.25 dB
THD: <0.01% @1 kHz, +20 dBu
Dynamic Range: >110dB (20 Hz-20 kHz) unweighted
Output Noise: <-90 dBu unweighted

MIC PREAMP
Gain: 0dB, +20dB, +40dB, +60dB
Phantom Power: +48VDC, 9.6mA max, soft on/off
Equivalent Input Noise: -128 dBu, 20-20kHz, 50 Ohm source

SIGNAL GENERATOR
White Noise, Pink Noise: 0dB

EQ FILTERS
Number: 15 per Input, 15 per Output
Selectable As:
Parametric
Bandwidth: 1/64th Octave to 4 Octave
Range: +15/-30dB, 0.1 dB increments
Frequency Resolution: 1 Hz
Low-Shelf
Slope: Selectable 6 or 12dB/Octave
Frequency Range: 20Hz to 2KHz
Range: +/-15dB, 0.1dB increments
High-Shelf
Slope: Selectable 6 or 12dB/Octave
Frequency Range: 3.886KHz to 20KHz
Range: +/-15 dB, 0.1 dB increments
All-Pass
Type: Second Order (-180 degrees)
Frequency Range: 20Hz to 20KHz

CROSSOVER FILTERS
High Pass Filter
Type: Linkwitz-Riley, Bessel, Butterworth
Slope: 12, 18, 24 and 48dB/Octave
Frequency Range: Off to 20KHz, 1Hz increments
Low Pass Filter
Type: Linkwitz-Riley, Bessel, Butterworth
Slope: 12, 18, 24 and 48dB/Octave
Frequency Range: Off to 20Hz, 1Hz increments

DELAY
Input Maximum Delay: 682.5ms
Increment: 20µs
Output Maximum Delay: 682.5ms
Increment: 20µs

GATE
Threshold: -80 to +20dBu, 1dBu increments
Floor: Off, -80 to 0dBu, 1dBu increments
Attack: 2, .5, 1, 2, 5, 10, 20, 50ms/dB
Release: 5, 10, 20 50, 100, 200, 500, 1000ms/dB

AUTOLEVELER
Target Level: -40 to +20dBu, 1dBu increments
Ratio: 1.2:1, 1.5:1, 2:1, 3:1, 4:1, 6:1, 10:1
Hold Time: 0, 1, 2, 3, 4, 5, 6Sec
Threshold Below Target -30 to 0dB, 1dB increments
Gain Increase Rate: 5, 10, 20 50, 100, 200, 500, 1000ms/dB
Gain Decrease Rate: 5, 10, 20 50, 100, 200, 500, 1000ms/dB

DUCKER
Trigger Threshold: -80 to +20dBu, 1dBu increments
Ducker Depth: Off, -30 to 0dB, 1dBu increments
Ducker Release: 5, 10, 20 50, 100, 200, 500, 1000ms/dB

CROSS POINT MIXER
Gain: -Inf, -50 to +12dB,
1dB increments with Mute

COMPRESSOR/LIMITER
Threshold: -20dBu to +20 dBu, 1dB increments
Ratio: 1.2 :1 to Infinity (1.2, 1.5, 2, 3, 4,
6, 10, 20, Infinite:1)
Attack: 0.5 ms to 50 ms per dB
Release: 10 ms to 1 sec. per dB



PROCESSOR
Input A/D: 24 bit
Output D/A: 24 bit
Processors: 24 bit signal, 48 bit filters,
56 bit accumulator
Sample Rate: 48 kHz
Propagation Delay: 1.46 ms

OTHER
Power Requirements: 90 - 240VAC, 50-60Hz, 40W
Shipping Weight: 13lbs (5.9kg) max
Dimensions: 19"L x 3.5"H x 8.5"D
(483cm x 89cm x 216cm)
Connections: Euroblock
Environmental: 40-120 deg. F,
(4-49 deg, C) non-condensing

GENERAL PURPOSE LOGIC OUTPUT OPTION
Output Source Current Per Channel: 10mA
Output Voltage: +12VDC
Output Supply Current: 100mA
Output Sink Current Per Channel: 100mA


14. TYPICAL APPLICATIONS

- Corporate Boardroom System
- Restaurant System
- Left/Center/Right Theater System
- Conference Center System
- Fire Alarm Mute

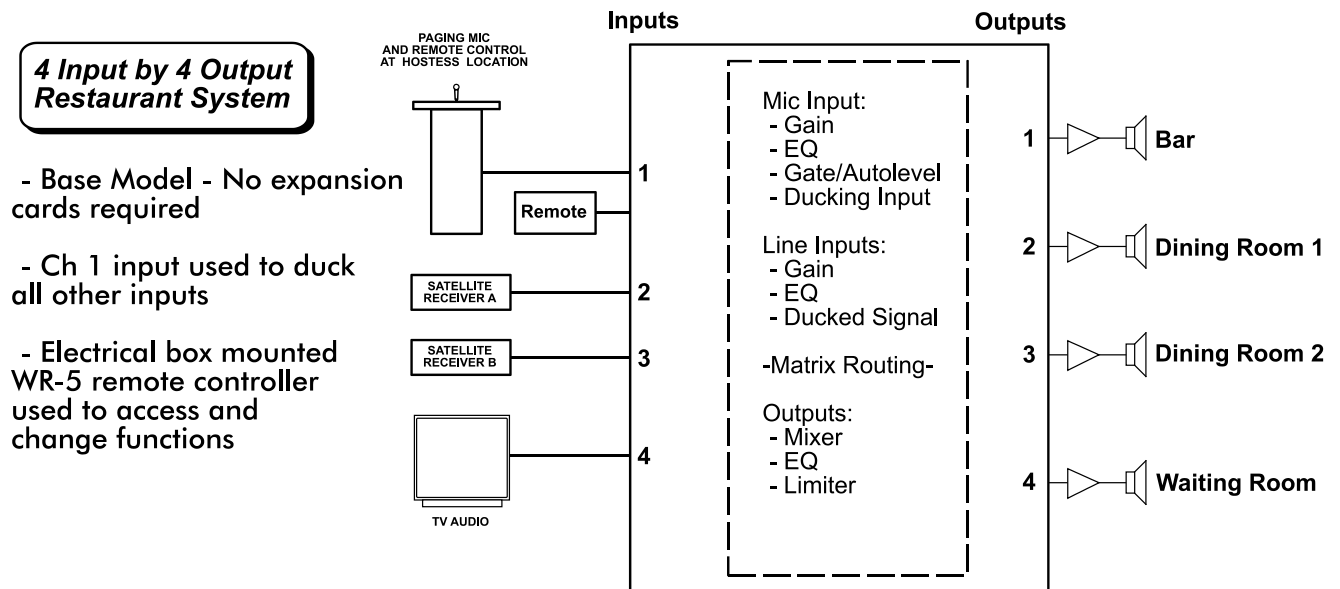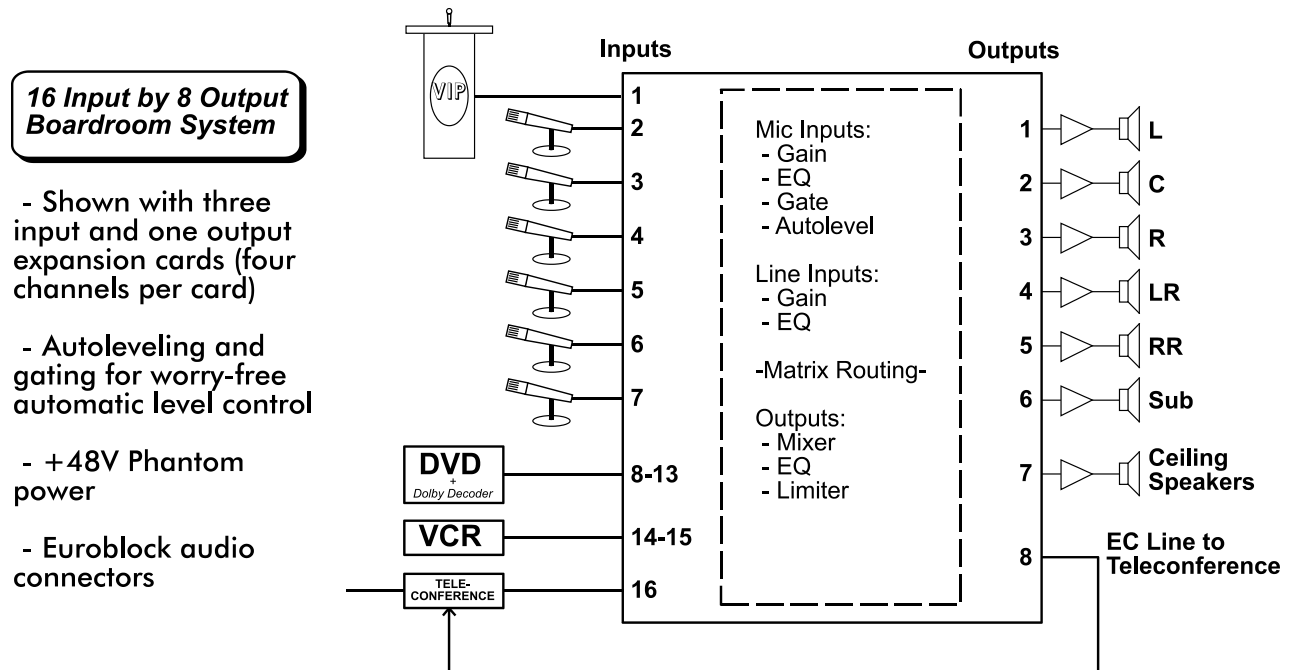


Left / Center / Right Theater System

- Three output expansion cards added
- Complete post-mixer system processor for all speaker locations
- WR-1 remote DC level controllers for dressing rooms

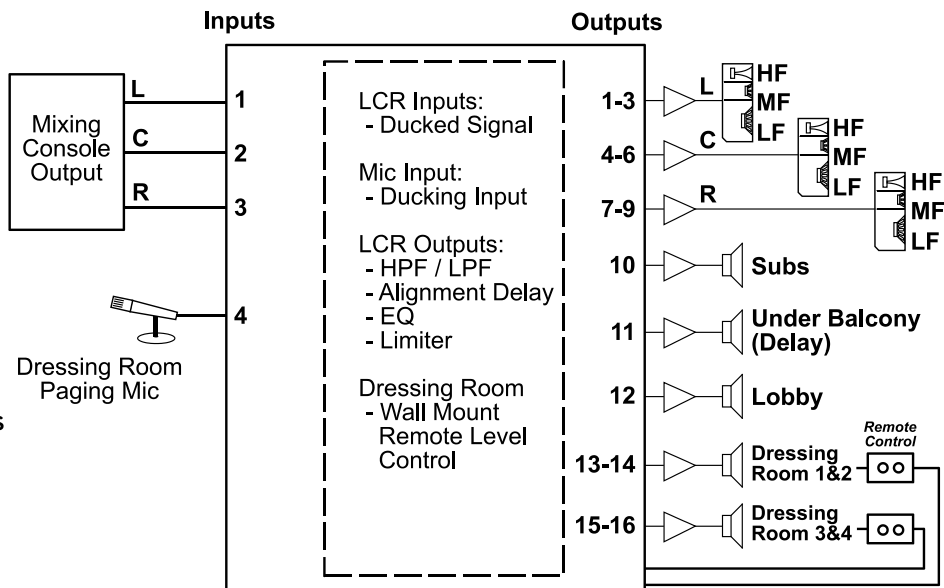


Conference Center System

- Three input expansion cards added
- Four independent room systems can easily be reconfigured using contact closure or WR-5 preset recall
- WR-1 remote level control for each room

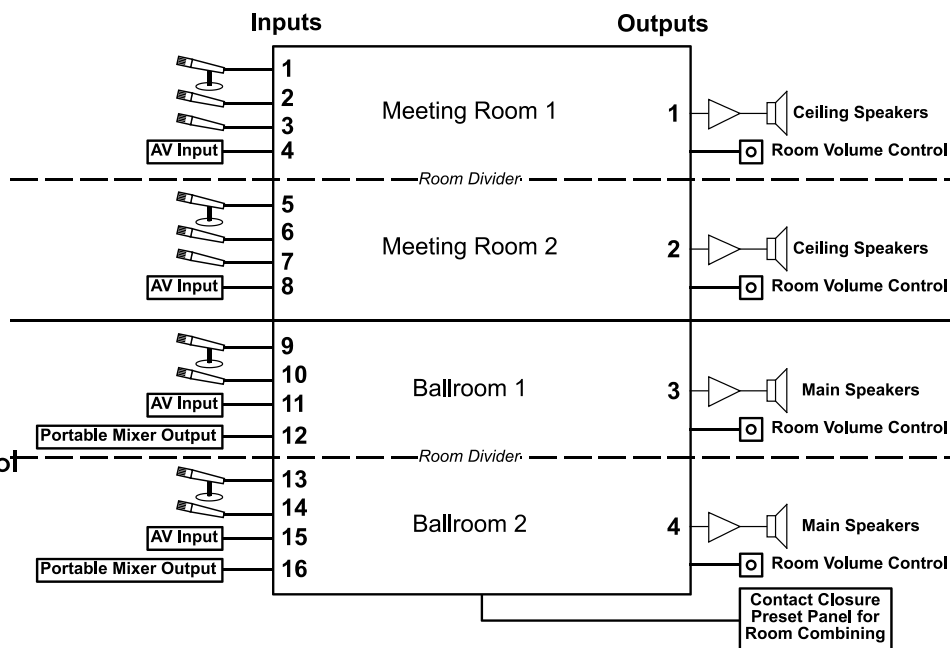

Fire Alarm Mute Configuration

- Use remote level control input to mute channels during emergency
- Fire alarm drives relay when active. Relay connects ne24.24M 0-5V remote level control ground to desired pin, muting all channels assigned in software (see sec. 10.1)

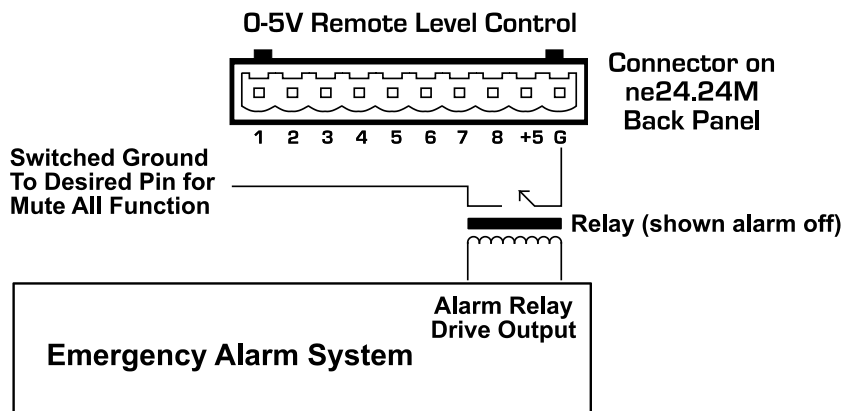

15. LIMITED WARRANTY (USA ONLY)

For Customers outside of the United States, please contact the distributor or dealer from whom the unit was originally purchased.

For units purchased in the USA, warranty service for this unit shall be provided by ASHLY AUDIO, INC. in accordance with the following warranty statement.

ASHLY AUDIO, INC. warrants to the owner of this product that it will be free from defects in workmanship and materials for a period of FIVE years from the original date of purchase, with the exception of certain touch-screen displays and motorized faders for which the warranty extends THREE years from the original date of purchase, and ONE year from the original date of purchase for Ashly EXP products.

Ashly Audio Inc. will, at its discretion and at no charge, either repair or replace any defective product or component upon prepaid delivery of the item to Ashly Audio Inc. service department. All warranty claims and returns of product must be accompanied by proof of the original date of purchase in the form of a valid sales receipt. This warranty confers specific legal rights, and additional rights pertaining to repair or replacement may vary by state.

WARRANTY EXCLUSIONS:

- 1) This warranty does not apply to damage resulting from misuse, neglect, improper installation, unauthorized modifications, or operation outside the product's intended use (failure to follow instructions in the operator's manual)
- 2) The warranty excludes defects or damages caused by external factors, including but not limited to accidents, environmental conditions, power surges or improper handling.
- 3) This warranty does not cover normal wear and tear, cosmetic damage, or consumable components that are expected to degrade over time.
- 4) The warranty does not extend to products that have been altered, repaired, or serviced by any party not authorized by the manufacturer.
- 5) Any damage arising from the use of incompatible accessories, attachments, or electrical supplies is excluded from coverage.
- 6) This warranty does not apply to equipment that has been subjected to installation related damage, improper storage, or transportation related impacts incurred during consumer-initiated transport after the product has been originally received.

This warranty is void if the serial number is altered, defaced, or removed. ASHLY AUDIO, INC. reserves the right to make changes in design, or make additions to, or improvements upon, this product without any obligation to install the same components as those installed on previously manufactured products.

Ashly Audio reserves the right to assess a fee for shipping and handling, should a product be determined non-defective upon completion of testing and thorough evaluation, regardless of warranty status.

Handling and storage fees will accrue on any product for which payment is not remitted within the required timeframe, in accordance with applicable state regulations.

In accordance with applicable state laws, any product deemed abandoned, left unclaimed, uncollected, or without customer response beyond the specified holding period may be used, sold or disposed of at the discretion of Ashly Audio Inc.

To the extent permitted by applicable state law any implied warranties, including the implied warranty of merchantability and the implied warranty of fitness for a particular purpose, are limited to the term of this written warranty. Some states do not allow limitations on the duration of implied warranties, so these limitations may not apply to you. Nothing in this warranty is intended to limit or exclude any rights or remedies available to the consumer under applicable state or federal warranty laws.

OBTAINING WARRANTY SERVICE INSIDE THE USA:

For warranty service in the United States, please visit the Ashly website, or [click here](#).

OBTAINING WARRANTY SERVICE OUTSIDE THE USA:

Please contact the authorized Ashly Distributor in your country. [Click here for a list of International Distributors](#).



ASHLY AUDIO 847 Holt Road Webster, NY 14580-9103, USA
Phone: (800) 828-6308 (585) 872-0010 Fax: (585) 872-0739 www.ashly.com

An *exertis* | **JAM** business

©2014 Ashly Audio. All rights reserved worldwide.

All features, specifications, and graphical representations are subject to change or improvement without notice.
All trademarks represented herein are the property of their respective owners.